

C wie Chassie - diese Codes beziehen sich auf das Fahrwerk, Bremsen, Lenkung usw

C0001	TCS Control Channel "A" Valve 1
C0002	TCS Control Channel "A" Valve 2
C0003	TCS Control Channel "B" Valve 1
C0004	TCS Control Channel "B" Valve 2
C0010	Left Front Inlet Control
C0011	Left Front Outlet Control
C0012	Left Front Hydraulic Release Too Long
C0014	Right Front Inlet Control
C0015	Right Front Outlet Control
C0016	Right Front Hydraulic Release Too Long
C0018	Left Rear Inlet Control
C0019	Left Rear Outlet Control
C001A	Left Rear Hydraulic Release Too Long
C001C	Right Rear Inlet Control
C001D	Right Rear Outlet Control
C001E	Right Rear Hydraulic Release Too Long
C0020	ABS Pump Motor Control
C0021	Brake Booster Performance
C0022	Brake Booster Solenoid
C0023	Stop Lamp Control
C0030	Left Front Tone Wheel
C0031	Left Front Wheel Speed Sensor
C0032	Left Front Wheel Speed Sensor Supply
C0033	Right Front Tone Wheel
C0034	Right Front Wheel Speed Sensor
C0035	Right Front Wheel Speed Sensor Supply
C0036	Left Rear Tone Wheel
C0037	Left Rear Wheel Speed Sensor
C0038	Left Rear Wheel Speed Sensor Supply
C0039	Right Rear Tone Wheel
C003A	Right Rear Wheel Speed Sensor
C003B	Right Rear Wheel Speed Sensor Supply
C003C	Rear Tone Wheel
C003D	Rear Wheel Speed Sensor
C003E	Rear Wheel Speed Sensor Supply
C0040	Brake Pedal Switch "A"
C0041	Brake Pedal Switch "B"
C0042	Brake Pedal Position Sensor "Circuit A"

C0043	Brake Pedal Position Sensor "Circuit B"
C0044	Brake Pressure Sensor "A"
C0045	Brake Pressure Sensor "B"
C0046	Brake Pressure Sensor "A"/"B"
C0047	Brake Booster Pressure Sensor
C0048	Brake Booster Travel Sensor
C0049	Brake Fluid
C004A	Brake Lining Wear Sensor
C0051	Steering Wheel Position Sensor
C0052	Steering Wheel Position Sensor "Signal A"
C0053	Steering Wheel Position Sensor "Signal B"
C0054	Steering Wheel Position Sensor "Signal C"
C0055	Steering Wheel Position Sensor "Signal D"
C0061	Lateral Acceleration Sensor
C0062	Longitudinal Acceleration Sensor
C0063	Yaw Rate Sensor
C0064	Roll Rate Sensor
C0069	Yaw Rate/Longitude Sensors
C006A	Multi-axis Acceleration Sensor
C006B	Stability System Active Too Long
C0071	2/4 Wheel Drive Status Input
C0072	Brake Temperature Too High
C0073	Delivered Driving Torque
C0074	Requested Driving Torque
C0075	Extended Brake Pedal Travel, output to PCM
C0076	PWM for Traction Control
C0077	Low Tire Pressure
C0078	Tire Diameter
C0079	Variable Effort Steering
C0081	ABS Malfunction Indicator
C0082	Brake System Malfunction Indicator
C0083	Tire Pressure Monitor Malfunction Indicator
C0084	Traction Active Indicator
C0085	Traction Disable Indicator
C0086	Vehicle Dynamics Indicator
C0089	TCS Disable Switch
C008A	TCS Mode Control
C0869	Air Suspension Auxiliary Inflator Indicator Lamp Circuit Failure
C1000	Hill Descent Control (HDC) Function
C1001	Vision System Camera

C1002	Left Power Running Board Stow
C1003	Right Power Running Board Stow
C1004	Right Power Running Board Deploy
C1005	Left Power Running Board Deploy
C1006	Left Power Running Board Motor
C1007	Right Power Running Board Motor
C1008	Left Power Running Board Position/Motion Sensor
C1009	Right Power Running Board Position/Motion Sensor
C100A	Brake Pedal Angle Sensor
C100B	Motor Drive Current
C100C	Steering Tracking
C100D	Brake Pedal Angle Sensor Circuit 1
C100E	Brake Pedal Angle Sensor Circuit 2
C100F	Brake Pedal Angle Sensor Supply
C1010	Continuous Vacuum Hublock (CVH) Solenoid
C1011	Brake Pedal Feel Simulator Cut-off Pressure Sensor
C1012	Brake Pedal Feel Simulator Cut-off Valve Solenoid
C1013	Brake System Pressure
C1014	Brake System Total Volume Balance
C1015	Vacuum Supply
C1016	Pedal Angle to Pedal Feel Simulator Cut-off Pressure Comparison
C1017	Boot/Trunk Primary Switch
C1018	Regenerative Braking
C101A	Vacuum Pressure Sensor
C101B	Vacuum Pressure Sensor Circuit B
C101C	Brake Vacuum Pump
C101D	Left Front Vertical Acceleration Sensor
C101E	Right Front Vertical Acceleration Sensor
C101F	Generic Valve Failure
C1020	Brake System Fill Not Complete
C1021	ABS Booster Control Pressure
C1022	Boot/Trunk Secondary Switch
C1025	Brake Primary Circuit Overboost Pressure
C1026	ABS Secondary Circuit Overboost Pressure
C1027	Master Cylinder (MC) to Primary Circuit Pressure
C1028	ABS Primary Circuit Wheel Pressure
C1029	ABS Primary Circuit Pressure lower than Secondary
C102A	Brake Secondary Circuit Pressure Mismatch Between Wheels
C102B	ABS Secondary Circuit Pressure lower than Primary
C1091	Speed Wheel Sensor All Coherency Failure

C1092	Unable to Calculate Engine Torque Data
C1093	Traction Control Disable Switch Circuit Failure
C1094	Park Brake Apply Switch Circuit Failure
C1095	ABS Hydraulic Pump Motor Circuit Failure
C1096	ABS Hydraulic Pump Motor Circuit Open
C1097	ABS Hydraulic Pump Motor Circuit Short To Ground
C1098	ABS Hydraulic Pump Motor Circuit Short To Battery
C1099	Electronic Power Steering Motor Malfunction
C109A	ABS Pump Supply Voltage Higher or Lower Than Expected
C109B	ABS Hydraulic Pump Motor Circuit- EMF Error
C109C	ABS Hydraulic Pump Motor Circuit – Pump Short Circuit
C1100	ABS Pump Switch Circuit Failure
C1101	ABS Hydraulic Valve Circuit Failure
C1102	ABS Acceleration Switch Circuit Failure
C1103	ABS Hydraulic Brake Switch Circuit Failure
C1104	Traction Control Active Lamp Circuit Short to Battery
C1105	Traction Control Disable Lamp Circuit Short to Battery
C1106	Traction Control Disable Switch Circuit Short to Battery
C1107	ABS Function Enabled Input Circuit Failure
C1108	Air in Hydraulic System
C1109	Speed Control Actuator Assembly Cable Release Failure
C110A	ABS Active Circuit Short to Battery
C110B	Traction Control Disable Switch Circuit Open
C110C	Left Front Damper Solenoid
C110D	Right Front Damper Solenoid
C110E	Left Rear Damper Solenoid
C110F	Right Rear Damper Solenoid
C1110	ABS Power Relay Coil Circuit Failure
C1111	ABS Power Relay Coil Open Circuit
C1112	ABS Power Relay Coil Short Circuit To Ground
C1113	ABS Power Relay Coil Short Circuit To Battery
C1114	ABS Power Relay Output Short Circuit To Ground
C1115	ABS Power Relay Output Short Circuit To Battery
C1116	Starter Motor Circuit Failure
C1117	RPM Input Circuit Failure
C1118	Traction Control Indicated Torque Reduction Circuit Failure
C1119	Traction Control Actual Torque Reduction Circuit Failure
C111A	Right Stop Lamp
C111B	Left Stop Lamp
C111C	Left Front Body Acceleration Sensor

C111D	Right Front Body Acceleration Sensor
C111E	Left Rear Body Acceleration Sensor
C111F	Right Rear Body Acceleration Sensor
C1120	Left Front Vertical Accelerometer Offset Out Of Range
C1121	Right Front Vertical Accelerometer Offset Out Of Range
C1122	Rear Vertical Accelerometer Offset Out Of Range
C1123	Vehicle Speed Sensor Input Short to Battery
C1124	Input shaft speed signal missing/faulted
C1125	Brake Fluid Level Sensor Input Circuit Failure
C1126	Cruise Control Command Switch Assembly Circuit Failure
C1127	Cruise Control Deactivator Brake Switch Circuit Failure
C1128	Lateral Accelerometer Offset Out Of Range
C1129	RR Height Sensor Circuit Failure
C112A	Lateral Accelerometer Sensor Out of Calibration
C112B	Isolation Switch
C112C	Mode Indicator 1
C112D	Mode Indicator 2
C112E	Mode Indicator 3
C112F	Air Spring Valve
C1130	RR Height Sensor Circuit Out of Range
C1131	Clutch Circuit Failure
C1132	Clutch Position Circuit Short to Ground
C1133	Clutch Position Circuit Short to Battery
C1134	Gear Shift Position Short to Ground
C1135	Gear Shift Position Short to Battery
C1136	Gear Select Position Short to Ground
C1137	ECU is Defective – don't use; use 9342
C1138	Gear Select Position Short to Battery
C1139	Wheel Speed Sensor Center Tone Ring Missing Tooth Fault
C113A	Wakeup Control
C1140	Hydraulic Base Brake Failure
C1141	Wheel Speed Sensor LF Tone Ring Tooth Missing Fault
C1142	Wheel Speed Sensor RF Tone Ring Tooth Missing Fault
C1143	Wheel Speed Sensor LR Tone Ring Tooth Missing Fault
C1144	Wheel Speed Sensor RR Tone Ring Tooth Missing Fault
C1145	Speed Wheel Sensor RF Input Circuit Failure
C1146	Speed Wheel Sensor RF Circuit Open
C1147	Vehicle Speed Sensor Signal Short to Ground
C1148	Speed Wheel Sensor RF Coherency Fault
C1149	Hydraulic Fluid Pressure/ Flow Circuit Failure

C1150	Two Speed Rear Axle Input Switch Circuit Short to Vbatt
C1151	Used for 1995 Contour
C1152	Used for 1995 Contour
C1153	Height Sensor Power Circuit Failure
C1154	Height Sensor Power Circuit Short to Battery
C1155	Speed Wheel Sensor LF Input Circuit Failure
C1156	Speed Wheel Sensor LF Circuit Open
C1157	Park Brake Actuator Assembly Switch Applied Circuit Failure
C1158	Speed Wheel Sensor LF Coherency Fault
C1159	Hydraulic Fluid Pressure/ Flow Circuit Short to Ground
C115A	Hydraulic Oil Temperature Sensor Circuit Input Above Normal Operating Temperature
C1160	Center Axle Disconnect (CAD) System General Failure
C1161	Air Pressure Low Circuit Short to Ground
C1162	Park Brake Switch x 2 Released Circuit Failure
C1163	Park Brake Switch – 2 Applied Circuit Short to Ground
C1164	Park Brake Actuator Assembly Switch Circuit Failure
C1165	Speed Wheel Sensor RR Input Circuit Failure
C1166	Speed Wheel Sensor RR Input Open Circuit
C1167	Park Brake Actuator Assembly Switch Released Circuit Short to Ground
C1168	Speed Wheel Sensor RR Coherency Fault
C1169	ABS Fluid Dumping Exceeds Maximum Timing
C116A	ABS Pressure Transducer / Brake Switch Mismatch
C1170	PRNDL Switch Circuit Failure
C1172	Park Brake Switch x 1 Applied Circuit Failure
C1173	Park Brake Switch – 1 Released Circuit Short to Ground
C1174	Park Brake Switch – 2 Applied Circuit Failure
C1175	Speed Wheel Sensor LR Input Circuit Failure
C1176	Speed Wheel Sensor LR Circuit Open
C1177	Park Brake Actuator Assembly Switch Released Circuit Failure
C1178	Speed Wheel Sensor LR Coherency Fault
C1179	Speed Control Actuator Assembly Cable Slack Failure
C1180	Park Brake Valve Solenoid #1 Sense Input Circuit Failure
C1181	Park Brake Valve Solenoid #1 Sense Input Circuit Short to Gound
C1182	Park Lamp Flash Relay Circuit Failure
C1183	Park Lamp Flash Relay Circuit Short to Battery
C1184	ABS System Is Not Operational
C1185	ABS Power Relay Output Circuit Failure
C1186	ABS Power Relay Output Open Circuit
C1187	Brake Fluid Level Sensor Input Open Circuit

C1188	Brake Fluid Level Sensor Input Short Circuit To Battery
C1189	Brake Fluid Level Sensor Input Short Circuit To Ground
C1190	Speed Wheel Sensor LF Input Short Circuit To Battery
C1191	Speed Wheel Sensor LF Input Short Circuit To Ground
C1192	Speed Wheel Sensor RF Input Short Circuit To Battery
C1193	Speed Wheel Sensor RF Input Short Circuit To Ground
C1194	ABS Outlet Valve Coil LF Circuit Failure
C1195	ABS Outlet Valve Coil LF Circuit Open
C1196	ABS Outlet Valve Coil LF Circuit Short To Battery
C1197	ABS Outlet Valve Coil LF Circuit Short To Ground
C1198	ABS Inlet Valve Coil LF Circuit Failure
C1199	ABS Inlet Valve Coil LF Circuit Open
C1200	ABS Inlet Valve Coil LF Circuit Short To Battery
C1201	ABS Inlet Valve Coil LF Circuit Short To Ground
C1202	ABS Outlet Valve Coil Rear Circuit Failure
C1203	ABS Outlet Valve Coil Rear Circuit Open
C1204	ABS Outlet Valve Coil Rear Circuit Short To Battery
C1205	ABS Outlet Valve Coil Rear Circuit Short To Ground
C1206	ABS Inlet Valve Coil Rear Circuit Failure
C1207	ABS Inlet Valve Coil Rear Circuit Open
C1208	ABS Inlet Valve Coil Rear Circuit Short To Battery
C1209	ABS Inlet Valve Coil Rear Circuit Short To Ground
C1210	ABS Outlet Valve Coil RF Circuit Failure
C1211	ABS Outlet Valve Coil RF Circuit Open
C1212	ABS Outlet Valve Coil RF Circuit Short To Battery
C1213	ABS Outlet Valve Coil RF Circuit Short To Ground
C1214	ABS Inlet Valve Coil RF Circuit Failure
C1215	ABS Inlet Valve Coil RF Circuit Open
C1216	ABS Inlet Valve Coil RF Circuit Short To Battery
C1217	ABS Inlet Valve Coil RF Circuit Short To Ground
C1218	Lamp ABS Warning Output Circuit Failure
C1219	Lamp ABS Warning Output Circuit Open
C1220	Lamp ABS Warning Output Circuit Short To Battery
C1221	Lamp ABS Warning Output Circuit Short To Ground
C1222	Speed Wheel Mismatch
C1223	Lamp Brake Warning Output Circuit Failure
C1224	Lamp Brake Warning Output Circuit Open
C1225	Lamp Brake Warning Output Circuit Short To Battery
C1226	Lamp Brake Warning Output Circuit Short To Ground
C1227	Speed Wheel Sensor LR Input Short Circuit To Battery

C1228	Speed Wheel Sensor LR Input Short Circuit To Ground
C1229	Speed Wheel Sensor Rear Center Coherency Fault
C1230	Speed Wheel Sensor Rear Center Input Circuit Failure
C1231	Speed Wheel Sensor Rear Center Circuit Open
C1232	Speed Wheel Sensor Rear Center Input Short Circuit To Battery
C1233	Speed Wheel LF Input Signal Missing
C1234	Speed Wheel RF Input Signal Missing
C1235	Speed Wheel RR Input Signal Missing
C1236	Speed Wheel LR Input Signal Missing
C1237	Speed Wheel Rear Input Signal Missing
C1238	ABS Hydraulic Pressure Differential Switch Input Circuit Failure
C1239	ABS Hydraulic Pressure Differential Switch Input Open Circuit
C1240	ABS Hydraulic Pressure Differential Switch Input Short Circuit To Battery
C1241	ABS Hydraulic Pressure Differential Switch Input Short Circuit To Ground
C1242	ABS Outlet Valve Coil LR Circuit Failure
C1243	ABS Outlet Valve Coil LR Circuit Open
C1244	ABS Outlet Valve Coil LR Circuit Short To Battery
C1245	ABS Outlet Valve Coil LR Circuit Short To Ground
C1246	ABS Outlet Valve Coil RR Circuit Failure
C1247	ABS Outlet Valve Coil RR Circuit Open
C1248	ABS Outlet Valve Coil RR Circuit Short To Battery
C1249	ABS Outlet Valve Coil RR Circuit Short To Ground
C1250	ABS Inlet Valve Coil LR Circuit Failure
C1251	ABS Inlet Valve Coil LR Circuit Open
C1252	ABS Inlet Valve Coil LR Circuit Short To Battery
C1253	ABS Inlet Valve Coil LR Circuit Short To Ground
C1254	ABS Inlet Valve Coil RR Circuit Failure
C1255	ABS Inlet Valve Coil RR Circuit Open
C1256	ABS Inlet Valve Coil RR Circuit Short To Battery
C1257	ABS Inlet Valve Coil RR Circuit Short To Ground
C1258	Speed Wheel LF Comparison Failure
C1259	Speed Wheel RF Comparison Failure
C1260	Speed Wheel RR Comparison Failure
C1261	Speed Wheel LR Comparison Failure
C1262	Lamp Warning Relay Circuit Failure
C1263	Lamp Warning Relay Circuit Open
C1264	Lamp Warning Relay Circuit Short To Battery
C1265	Lamp Warning Relay Circuit Short To Ground
C1266	ABS Valve Power Relay Circuit Failure
C1267	ABS Functions Temporarily Disabled

C1268	Motor Relay x 1 Circuit Failure
C1269	Motor Relay – 1 Circuit Short to Battery
C1270	Engine x 1 Input Circuit Failure
C1271	Engine x 1 Input Circuit Short to Gnd
C1272	Engine x 2 Input Circuit Failure
C1273	Engine x 2 Input Circuit Short to Vbat
C1274	Solenoid Relay x 1 Circuit Failure
C1275	Solenoid Relay – 1 Circuit Short to Vbatt
C1276	Park Brake Actuator Assembly Switch Applied Circuit Short to Gnd
C1277	Steering Wheel Angle 1 and 2 Circuit Failure
C1278	Steering Wheel Angle 1 and 2 Signal Faulted
C1279	Yaw Rate Sensor circuit Failure
C127A	Yaw Rate Sensor Out of Calibration
C1280	Yaw Rate Sensor Signal Fault
C1281	Lateral Accelerometer circuit Failure
C1282	Lateral Accelerometer Signal Fault
C1283	Switch Test Signal Failure
C1284	Oil Pressure Switch Failure
C1285	Booster Solenoid Circuit Failure
C1286	Booster Mechanical Failure
C1287	Booster Pedal Force Switch Circuit Failure
C1288	Pressure Transducer Main / Primary Input Circuit Failure
C1289	Pressure Transducer Redundant / Secondary Input Circuit Failure
C1290	Pressure Transducer Circuit Failure
C1291	ACC Module Overheated
C1292	ACC Blockage Detection
C1293	ACC Alignment Offset Angle Out of Range
C1294	ACC Active Speed Out of Range
C1295	Steering Wheel Angle Sensor Internal Fault
C1296	Wheel Speed LF Signal Fault
C1297	Wheel Speed RF Signal Fault
C1298	Wheel Speed RR Signal Fault
C1299	Wheel Speed LR Signal Fault
C1300	ABS Pump Motor Circuit Failure
C1301	ABS Operation Timed Out
C1302	Left Front Isolation Clamping Circuit Failure
C1303	Right Front Isolation Clamping Circuit Failure
C1304	Cruise Control Command Switch Resistance Out of Range
C1305	Longitudinal Accelerometer Signal Fault
C1306	Steering Wheel Angle – No Center Found During Initialization

C1307	Steering Wheel Angle Sensor Encoder Ring Defective
C1308	Wheel Speed Sensor Wire(s) Shorted to Ground
C1309	Wheel Speed Sensor Wires Shorted Together
C1310	Brake Hydraulic Pressure Transducer Front Left Wheel Circuit Failure
C1311	Brake Hydraulic Pressure Transducer Front Left Wheel Signal Fault
C1312	Brake Hydraulic Pressure Transducer Front Right Wheel Circuit Failure
C1313	Brake Hydraulic Pressure Transducer Front Right Wheel Signal Fault
C1314	Brake Hydraulic Pressure Transducer Rear Left Wheel Circuit Failure
C1315	Brake Hydraulic Pressure Transducer Rear Left Wheel Signal Fault
C1316	Brake Hydraulic Pressure Transducer Rear Right Wheel Circuit Failure
C1317	Brake Hydraulic Pressure Transducer Rear Right Wheel Signal Fault
C1318	Brake Hydraulic Pressure Transducer Accumulator Circuit Fault
C1319	Brake Hydraulic Pressure Transducer Accumulator Signal Fault
C1320	Brake Hydraulic Accumulator Travel Sensor Circuit Failure
C1321	Brake Hydraulic Accumulator Travel Sensor Signal Fault
C1322	Brake Hydraulic Master Cylinder Piston-Travel Sensor 1 Circuit Failure
C1323	Brake Hydraulic Master Cylinder piston-Travel Sensor 1 Signal Fault
C1324	Brake Hydraulic Master Cylinder piston-Travel Sensor 2 Circuit Failure
C1325	Brake Hydraulic Master Cylinder piston-Travel Sensor 2 Signal Fault
C1326	Hydraulic Control Unit is Faulted
C1327	Brake Fluid Level Low
C1328	Electro-Hydraulic General Pressure Sensor Failure
C1329	ABS Outlet Valve Coil RF Circuit Excessive Temperature
C1330	ABS Outlet Valve Coil LR Circuit Excessive Temperature
C1331	ABS Outlet Valve Coil RR Circuit Excessive Temperature
C1332	ABS Outlet Valve Coil LF Circuit Excessive Temperature
C1333	ABS Inlet Valve Coil LR Circuit Excessive Temperature
C1334	ABS Inlet Valve Coil LF Circuit Excessive Temperature
C1335	ABS Inlet Valve Coil RF Circuit Excessive Temperature
C1336	ABS Inlet Valve Coil RR Circuit Excessive Temperature
C1400	Traction Control Valve RF Circuit Failure
C1401	Traction Control Valve RF Circuit Open
C1402	Traction Control Valve RF Circuit Short To Ground
C1403	Traction Control Valve RF Circuit Short To Battery
C1404	Traction Control Valve Rear Circuit Failure
C1405	Traction Control Valve Rear Circuit Open
C1406	Traction Control Valve Rear Circuit Short To Ground
C1407	Traction Control Valve Rear Circuit Short To Battery
C1408	Park Brake Release Switch Circuit Out of Range
C1409	Park Brake Apply Switch Circuit Out of Range

C1410	Traction Control Valve LF Circuit Failure
C1411	Traction Control Valve LF Circuit Open
C1412	Traction Control Valve LF Circuit Short To Ground
C1413	Traction Control Valve LF Circuit Short To Battery
C1414	Incorrect Module Design Level
C1415	Incorrect Module Configuration
C1416	Damper RF Circuit Short To Battery
C1417	Damper RF Circuit Short to Ground
C1418	Damper RF Circuit Failure
C1419	Damper RF Circuit Open
C1420	Hydraulic Fluid Pressure/ Flow Circuit Short to Vbatt
C1421	Damper LF Circuit Short To Battery
C1422	Damper LF Circuit Short to Ground
C1423	Damper LF Circuit Failure
C1424	Damper LF Circuit Open
C1425	Damper RR Circuit Short to Ground
C1426	Damper RR Circuit Short To Battery
C1427	Damper RR Circuit Open
C1428	Damper RR Circuit Failure
C1429	Input-shaft-speed Input Circuit Failure
C1430	Damper LR Circuit Open
C1431	Damper LR Circuit Short To Battery
C1432	Damper LR Circuit Short to Ground
C1433	Damper LR Circuit Failure
C1435	Accelerometer Rear Circuit Failure
C1436	Accelerometer Rear Circuit Signal Is Not Sensed
C1437	Accelerometer Rear Circuit Short To Ground
C1438	Accelerometer Rear Circuit Short To Battery
C1439	Vehicle Acceleration EEC-IV Circuit Failure
C1440	Pressure Transducer Main / Primary Signal Faulted
C1441	Steering Phase A Circuit Signal Is Not Sensed
C1442	Steering Phase B Circuit Signal Is Not Sensed
C1443	Steering Phase A Circuit Short To Ground
C1444	Steering Phase B Circuit Short To Ground
C1445	Speed Vehicle Signal Circuit Failure
C1446	Brake Switch Circuit Failure
C1447	Traction Control Module Request Circuit Failure
C1448	Lamp Adaptive Damping Warning Circuit Failure
C1449	Traction Control Motor Coherency Fault
C144A	Steering Phase C Circuit Short to Ground

C144B	Steering Phase Z Circuit Short to Ground
C144C	Steering Phase C Circuit Signal Is Not Sensed
C144D	Steering Phase Z Circuit Signal Is Not Sensed
C1450	Traction Control Motor Circuit Failure
C1451	Traction Control Motor Circuit Open
C1452	Traction Control Motor Circuit Short to Battery
C1453	Traction Control Motor Circuit Short to Ground
C1454	Front Lateral Accelerometer Circuit Failure
C1455	Accelerometer Front Circuit Failure
C1456	Accelerometer Front Circuit Is Not Sensed
C1457	Accelerometer Front Circuit Short To Ground
C1458	Accelerometer Front Circuit Short To Battery
C1459	Adaptive Mode Switch Circuit Failure
C1460	Vehicle Accelerometer Power Circuit Failure
C1461	Vehicle Accelerometer Power Circuit Short to Battery
C1462	Left Front Vertical Accelerometer Circuit Failure
C1463	Right Front Vertical Accelerometer Circuit Failure
C1464	Pressure Transducer Redundant / Secondary Signal Faulted
C1465	Damper High Side Front Circuit Short To Battery
C1466	Damper Circuit Failure
C1467	Damper High Side Rear Circuit Short To Battery
C1468	Damper Low Side Front Circuit Failure
C1469	Damper Low Side Rear Circuit Failure
C1470	TCS Functions Temporarily Disabled (Thermal Brake Protection)
C1471	High Pressure Accumulator (HPA) Volume Consumption Plausibility Failure
C1472	Master Cylinder Volume/Travel Plausibility Failure
C1473	Brake System Valve Calibration Data Failure
C1474	High Pressure Accumulator (HPA) Sensor Calibration Data Failure
C1475	High Pressure Accumulator (HPA) Pressure/Volume/Temperature Plausibility Failure
C1476	Brake System Pump Volume Feed Too Low Plausibility Failure
C1477	High Pressure Hydraulic Circuit Leakage Plausibility Failure
C1478	Left Front Wheel Brake Pressure Control Plausibility Failure
C1479	Left Rear Wheel Brake Pressure Control Plausibility Failure
C1480	Right Front Wheel Brake Pressure Control Plausibility Failure
C1481	Right Rear Wheel Brake Pressure Control Plausibility Failure
C1482	Air Bleed Check Incomplete
C1483	Valve Calibration Incomplete
C1484	Brake Pads Worn Input Short to Ground
C1495	Traction Control Motor Potentiometer Circuit Failure

C1496	Traction Control Motor Potentiometer Circuit Open
C1497	Traction Control Motor Potentiometer Circuit Short to Battery
C1498	Traction Control Motor Potentiometer Circuit Short to Ground
C1499	Transfer Case Contact Plate "A" Encoder Circuit Failure
C1500	Transfer Case Contact Plate "B" Encoder Circuit Failure
C1501	Transfer Case Contact Plate "C" Encoder Circuit Failure
C1502	Transfer Case Contact Plate "D" Encoder Circuit Failure
C1503	Dynamic Stability Control Left Front Valve Malfunction
C1504	Dynamic Stability Control Right Front Valve Malfunction
C1505	Dynamic Stability Control Left Rear Valve Malfunction
C1506	Dynamic Stability Control Right Rear Valve Malfunction
C1507	Traction Control of Brake Exceeds Time-Out
C1508	Traction Control of Engine Exceeds Time-Out
C1510	Right Front Wheel Pressure Reduction Performance Problem
C1511	Left Front Wheel Pressure Reduction Performance Problem
C1512	Right Rear Wheel Pressure Reduction Performance Problem
C1513	Left rear Wheel Pressure Reduction Performance Problem
C1515	Lateral Accelerometer Open/Short or Disorientation
C1516	Roll Rate Sensor Signal Fault
C1517	Roll Rate Sensor Circuit Failure
C1518	Red Fault Warning Lamp Indicator Short to Battery
C1519	Red Fault Warning Lamp Indicator Circuit Failure
C1520	Delta-S Plausibility Failure
C1521	Delta-S Circuit Failure
C1522	Brake Pedal Travel Sensor Internal Power Supply Failure
C1523	Brake Fluid Level Sensor Out of Range
C1524	Brake Pedal Travel Sensor Calibration Incomplete
C1525	Brake System Initialization Incomplete
C1526	Brake Pedal Travel Sensor Fault
C1527	Traction Control Rear Valve Circuit Excessive Temperature
C1528	Traction Control LF Valve Circuit Excessive Temperature
C1529	Booster Solenoid Circuit Excessive Temperature
C1530	Dynamic Stability Control RF Valve Circuit Excessive Temperature
C1531	Dynamic Stability Control LF Valve Circuit Excessive Temperature
C1600	Regenerative Brake System Fault
C1699	Left Rear Outer Sensor Circuit Short to Vbat
C1700	Left Rear Outer Sensor Circuit Failure or Blockage
C1701	Left Rear Outer Sensor Circuit Fault
C1702	Right Rear Outer Sensor Circuit Short to Vbat
C1703	Right Rear Outer Sensor Circuit Failure or Blockage

C1704	Right Rear Outer Sensor Circuit Fault
C1705	Left Rear Center Sensor Circuit Short to Vbat
C1706	Left Rear Center Sensor Circuit Failure
C1707	Left Rear Center Sensor Circuit Fault
C1708	Right Rear Center Sensor Circuit Short to Vbat
C1709	Right Rear Center Sensor Circuit Failure
C170A	UP ARROW Button Circuit Failure
C170B	ENTER Button Circuit Failure
C170C	DOWN ARROW Button Circuit Failure
C170D	MENU Button Circuit Failure
C1710	Right Rear Center Sensor Circuit Fault
C1711	Left Front Sensor Circuit Short to Vbat
C1712	Left Front Sensor Circuit Failure
C1713	Left Front Sensor Circuit Fault
C1714	Right Front Sensor Circuit Short to Vbat
C1715	Right Front Sensor Circuit Failure
C1716	Right Front Sensor Circuit Fault
C1717	Left Front Center Sensor Circuit Short to Vbat
C1718	Left Front Center Sensor Circuit Failure
C1719	Left Front Center Sensor Circuit Fault
C1721	Air Suspension Height Sensor Power Circuit Open
C1722	Air Suspension Height Sensor Power Circuit Short To Battery
C1723	Air Suspension Height Sensor Power Circuit Short To Ground
C1724	Fault DTC: Air Suspension Height Sensor Power Circuit Failure
C1725	Air Suspension Front Pneumatic Failure
C1726	Air Suspension Rear Pneumatic Failure
C1727	Air Suspension Reservoir Pneumatic Failure
C1728	Transfer Case Unable to Transition Between 2H and 4H
C1729	Transfer Case Unable to Transition Between 4H and 4L
C1730	Reference Voltage Out of Range (+5 v)
C1731	Air Suspension LF Corner Up Timeout
C1732	Air Suspension LF Corner Down Timeout
C1733	Air Suspension RF Corner Up Timeout
C1734	Air Suspension RF Corner Down Timeout
C1735	Air Suspension LR Corner Up Timeout
C1736	Air Suspension LR Corner Down Timeout
C1737	Air Suspension RR Corner Up Timeout
C1738	Air Suspension RR Corner Down Timeout
C1739	Right Front Center Sensor Circuit Short to Vbat
C173A	Right Front Center Sensor Open Circuit

C173B	Left Front Sensor Open Circuit
C173C	Right Front Sensor Open Circuit
C173D	Left Front Center Sensor Open Circuit
C1740	Right Front Center Sensor Circuit Failure
C1741	Right Front Center Sensor Circuit Fault
C1742	Rear Sounder Circuit Failure
C1743	Rear Sounder Circuit Short to Vbatt
C1744	Front Sounder Circuit Failure
C1745	Front Sounder Circuit Short to Vbatt
C1748	Switch input Circuit Short to Gnd
C1749	Trailer Input Circuit Failure
C1750	Accelerator Position Sensor Out of Range
C1751	Vehicle Speed Sensor – 1 Output Circuit Short to Vbatt
C1752	Vehicle Speed Sensor – 1 Output Circuit Short to Gnd
C1753	Hydraulic Clutch Actuator Valve Signal Fault
C1754	Hydraulic Clutch Actuator Valve Circuit Failure
C1755	Power Limit Shutdown Fault
C1756	Air Suspension Front Height Sensor High (SE) Signal Circuit Failure
C1757	Air Suspension Front Height Sensor High (SE) Signal Circuit Open
C1758	Air Suspension Front Height Sensor High (SE) Signal Circuit Short To Battery
C1759	Air Suspension Front Height Sensor High (SE) Signal Circuit Short To Ground
C1760	Air Suspension Rear Height Sensor High (SE) Signal Circuit Failure
C1761	Air Suspension Rear Height Sensor High (SE) Signal Circuit Open
C1762	Air Suspension Rear Height Sensor High (SE) Signal Circuit Short To Battery
C1763	Air Suspension Rear Height Sensor High (SE) Signal Circuit Short To Ground
C1765	Air Suspension Rear Height Sensor Low Signal Circuit Failure
C1766	Air Suspension Rear Height Sensor Low Signal Circuit Open
C1767	Air Suspension Rear Height Sensor Low Signal Circuit Short To Battery
C1768	Air Suspension Rear Height Sensor Low Signal Circuit Short To Ground
C1769	Park Brake Apply Switch Circuit Short to Ground
C1770	Air Suspension Vent Solenoid Output Circuit Failure
C1771	Air Suspension Vent Solenoid Output Circuit Open
C1772	Air Suspension Vent Solenoid Output Circuit Short To Battery
C1773	Air Suspension Vent Solenoid Output Circuit Short To Ground
C1774	Coolant Temp. Out of Range
C1775	DC-DC Converter Failure
C1776	Heater System Failure

C1777	Vacuum Pressure Circuit Failure
C1778	Power Steering Failure
C1779	Blower Switch Failure
C1780	Temperature Select Failure
C1781	Engine Coolant Temperature Signal Missing/Fault
C1782	Park Brake Release Switch Circuit Failure
C1783	Park Brake Release Switch Short to Ground
C1784	Electric Park Brake Motor Output Short to Ground
C1785	Electric Park Brake Motor Output Open Circuit
C1786	Electric Park Brake Motor Output Battery Short to Ground
C1787	Stoplamp Relay Output Circuit Short to Battery
C1788	Stoplamp Relay Output Circuit Short to Ground
C1789	Stoplamp Relay Output Circuit Open
C1790	Air Suspension LR Air Spring/Shock Solenoid Output Circuit Failure
C1791	Air Suspension LR Air Spring/Shock Solenoid Output Circuit Open
C1792	Air Suspension LR Air Spring/Shock Solenoid Output Circuit Short To Battery
C1793	Air Suspension LR Air Spring/Shock Solenoid Output Circuit Short To Ground
C1794	Air Suspension Vehicle Over Gross Vehicle Weight
C1795	Air Suspension RR Air Spring/Shock Solenoid Output Circuit Failure
C1796	Air Suspension RR Air Spring/Shock Solenoid Output Circuit Open
C1797	Air Suspension RR Air Spring/Shock Solenoid Output Circuit Short To Battery
C1798	Air Suspension RR Air Spring/Shock Solenoid Output Circuit Short To Ground
C1799	Hall Effect Circuit Failure
C1800	Air Suspension Reservoir Solenoid Circuit Failure
C1801	Motor Engage Current Reached Before Full Apply Travel Distance
C1802	Motor Engage Current Not Reached or Traveled Too Far Apply
C1803	Motor Disengage Full Travel Distance Not Reached Upon Release
C1804	Park Brake Apply Switch Stuck ON
C1805	Mismatched PCM and/or ABS-TC Modules
C1806	Park Brake Release Switch Stuck ON
C1807	Vent solenoid supply short to battery
C1808	Vent solenoid supply short to ground
C1809	Air Suspension Vent Timeout
C1810	Air Suspension Height Sensor Out of Range
C1811	Air Suspension Return to Trim Timeout
C1812	Air Suspension Height Sensor Failure
C1813	Air Suspension LR Vent Request Exceeded Max. Timing

C1814	Air Suspension RR Vent Request Exceeded Max. Timing
C1815	Electric Park Brake Motor Output Short to Battery
C1816	Electric Park Brake Needs Service
C1818	Air Suspension LR Air Compress Request Exceeded Max. Timing
C1819	Air Suspension RR Air Compress Request Exceeded Max. Timing
C1820	Air Suspension RF Air Compress Request Exceeded Max. Timing
C1821	Electric Park Brake Motor Failure
C1822	Electric Park Brake Sensor Electrical Failure
C1823	Electric Park Brake Sensor Signal Failure
C1824	Electric Park Brake Motor H-Bridge Failure
C1825	Missing Cranking Signal
C1826	Electric Park Brake Electrical Failure
C1827	Electric Park Brake Switch Defective
C1828	Electric Park Brake Force Sensor Not Calibrated
C1829	Electric Park Brake Switch Not Connected
C1830	Air Suspension Compressor Relay Circuit Failure
C1831	Air Suspension Compressor Relay Circuit Open
C1832	Air Suspension Compressor Relay Circuit Short To Battery
C1833	Air Suspension Compressor Relay Circuit Short To Ground
C1834	Gauge Drive Current Fault
C1835	Current Sense Circuit Failure
C1836	Battery Temp. Out of Range
C1837	Battery Heater Circuit Failure
C1838	Charging System Fault
C1839	Leakage Fault
C1840	Air Suspension Disable Switch Circuit Failure
C1841	Air Suspension Disable Switch Circuit Open
C1842	Air Suspension Disable Switch Circuit Short To Battery
C1843	Air Suspension Disable Switch Circuit Short To Ground
C1844	Air Suspension Secondary Front Inflator Solenoid Output Circuit Failure
C1845	Air Suspension Front Inflator Solenoid Output Circuit Failure
C1846	Air Suspension Front Inflator Solenoid Output Circuit Open
C1847	Air Suspension Front Inflator Solenoid Output Circuit Short To Battery
C1848	Air Suspension Front Inflator Solenoid Output Circuit Short To Ground
C1849	Master Cylinder Pressure Out of Range
C1850	Air Suspension Warning Lamp Circuit Failure
C1851	Air Suspension Warning Lamp Circuit Open
C1852	Air Suspension Warning Lamp Circuit Short To Battery
C1853	Air Suspension Warning Lamp Circuit Short To Ground
C1854	Motor Temperature Out of Range

C1855	Acceleration Position Sensor Conflict
C1856	Traction Motor Encoder circuit Failure
C1859	PRNDL Input #2 Circuit Failure
C1860	PRNDL Input #3 Circuit Failure
C1861	PRNDL Input #4 Circuit Failure
C1862	Contactor Circuit Failure
C1863	External Charging Fault
C1864	Battery Module Fault
C1865	Air Suspension Rear Inflator Solenoid Output Circuit Failure
C1866	Air Suspension Rear Inflator Solenoid Output Circuit Open
C1867	Air Suspension Rear Inflator Solenoid Output Circuit Short To Battery
C1868	Air Suspension Rear Inflator Solenoid Output Circuit Short To Ground
C1869	Air Suspension Gate Solenoid Output Circuit Failure
C1870	Air Suspension Gate Solenoid Output Circuit Open
C1871	Air Suspension Gate Solenoid Output Circuit Short To Battery
C1872	Air Suspension Gate Solenoid Output Circuit Short To Ground
C1873	Air Suspension RF Air Spring Solenoid Output Circuit Failure
C1874	Air Suspension RF Air Spring Solenoid Output Circuit Open
C1875	Air Suspension RF Air Spring Solenoid Output Circuit Short To Battery
C1876	Air Suspension RF Air Spring Solenoid Output Circuit Short To Ground
C1877	Air Suspension LF Air Spring Solenoid Output Circuit Failure
C1878	Air Suspension LF Air Spring Solenoid Output Circuit Open
C1879	Air Suspension LF Air Spring Solenoid Output Circuit Short To Battery
C1880	Air Suspension LF Air Spring Solenoid Output Circuit Short To Ground
C1881	Air Suspension RF Height Sensor Circuit Failure
C1882	Air Suspension RF Height Sensor Circuit Open
C1883	Air Suspension RF Height Sensor Circuit Short To Battery
C1884	Air Suspension RF Height Sensor Circuit Short To Ground
C1885	Air Suspension RR Height Sensor Circuit Failure
C1886	Air Suspension RR Height Sensor Circuit Open
C1887	Air Suspension RR Height Sensor Circuit Short To Battery
C1888	Air Suspension RR Height Sensor Circuit Short To Ground
C1889	Air Suspension LF Height Sensor Circuit Failure
C1890	Air Suspension LF Height Sensor Circuit Open
C1891	Air Suspension LF Height Sensor Circuit Short To Battery
C1892	Air Suspension LF Height Sensor Circuit Short To Ground
C1893	Air Suspension LR Height Sensor Circuit Failure
C1894	Air Suspension LR Height Sensor Circuit Open
C1895	Air Suspension LR Height Sensor Circuit Short To Battery
C1896	Air Suspension LR Height Sensor Circuit Short To Ground

C1897	Steering VAPS II Circuit Loop Failure
C1898	Steering VAPS II Circuit Loop Open
C1899	Steering VAPS II Circuit Loop Short To Battery
C1900	Steering VAPS II Circuit Loop Short To Ground
C1901	Ride Control RR Shock Actuator Circuit Failure
C1902	Ride Control RR Shock Actuator Circuit Open
C1903	Ride Control RR Shock Actuator Circuit Short To Battery
C1904	Ride Control RR Shock Actuator Circuit Short To Ground
C1905	Ride Control LR Shock Actuator Circuit Failure
C1906	Ride Control LR Shock Actuator Circuit Open
C1907	Ride Control LR Shock Actuator Circuit Short To Battery
C1908	Ride Control LR Shock Actuator Circuit Short To Ground
C1909	Ride Control RF Shock Actuator Circuit Failure
C1910	Ride Control RF Shock Actuator Circuit Open
C1911	Ride Control RF Shock Actuator Circuit Short To Battery
C1912	Ride Control RF Shock Actuator Circuit Short To Ground
C1913	Ride Control LF Shock Actuator Circuit Failure
C1914	Ride Control LF Shock Actuator Circuit Open
C1915	Ride Control LF Shock Actuator Circuit Short To Battery
C1916	Ride Control LF Shock Actuator Circuit Short To Ground
C1917	Steering EVO Out-of-Range Fault
C1918	Air Suspension Ride Height Select Switch Circuit Failure
C1920	Led #1 Circuit Failure
C1921	VAPS Solenoid Actuator Output Circuit Failure
C1922	VAPS Solenoid Actuator Output Circuit Open
C1923	VAPS Solenoid Actuator Output Circuit Short To Battery
C1924	VAPS Solenoid Actuator Output Circuit Short To Ground
C1925	VAPS Solenoid Actuator Return Circuit Failure
C1926	VAPS Solenoid Actuator Return Circuit Open
C1927	VAPS Solenoid Actuator Return Circuit Short To Battery
C1928	VAPS Solenoid Actuator Return Circuit Short To Ground
C1929	Air Suspension Front Compressor Relay Circuit Failure
C192A	Solenoid Actuator Circuit Failure
C192B	Solenoid Actuator Circuit Open
C192C	Solenoid Actuator Circuit Short to Battery
C192D	Solenoid Actuator Circuit Short to Ground
C1930	Air Suspension Front Compressor Relay Circuit Open
C1931	Air Suspension Front Compressor Relay Circuit Short To Battery
C1932	Air Suspension Front Compressor Relay Circuit Short To Ground
C1933	Solenoid Current Out Of Range

C1934	HPU (Hydraulic Pump Unit) Pressurization Failure
C1935	Chime Circuit Failure
C1936	Hydraulic Pump Relay Circuit Failure
C1937	Steering Wheel Angle Sensor Offset Failure
C1938	Invalid Steering Wheel Angle Sensor ID
C1939	Brake Pressure Switch Input Circuit Failure
C1940	Brake Pressure Switch Mechanical Failure
C1941	Zero Seat Weight Test Failure
C1942	Unrecognized Powertrain Configuration
C1943	Airbag Deployment Indication Input Fault
C1944	Gauge Driver Circuit Fault
C1945	Park Switch Indicates Park with Vehicle Moving
C1946	Front Driver's Seat Track Position Switch Circuit Open
C1947	Front Driver's Seat Track Position Switch Circuit Short to Ground
C1948	Front Driver's Seat Track Position Switch Circuit Resistance Out of Range
C1949	Accelerometer Sensor Circuit Open
C1950	Accelerometer Sensor Circuit Failure
C1951	Lateral Accelerometer Sensor Circuit Open
C1952	Yaw Rate Sensor Circuit Open
C1953	Master Cylinder Pressure Sensor Circuit Open
C1954	Master Cylinder Pressure Sensor Circuit Failure
C1955	Steering Angle Sensor Circuit Open
C1956	Steering Angle Sensor Circuit Failure
C1957	Dynamic Stability Control Valve RF Circuit Failure
C1958	Dynamic Stability Control Valve LF Circuit Failure
C1959	Lateral Accelerometer Sensor Circuit Failure
C195A	Steering Angle Sensor Circuit Short To Battery
C195B	Steering Angle Sensor Circuit Short To Ground
C1960	Driver Brake Apply Circuit Fault
C1961	Park Lamp Relay Coil Circuit Failure
C1962	Park Lamp Relay Coil Short to Battery
C1963	Stability Control Inhibit Warning
C1964	Air Susp'n Air Compressor Request Exceeded Max Timing
C1965	Fuel Level Circuit Failure
C1966	Low Fuel Indicator Circuit Short to Battery
C1967	Low Fuel Indicator Circuit Failure
C1968	Electronic Panic Brake Assist Failure
C1969	TC/YC Switch Lamp Circuit Fault.
C1970	4×4 Low Mode Switch LED Short To Battery
C1971	4×4 Low Mode Switch LED Circuit Failure

C1972	Air Suspension Kneel Switch Circuit Failure
C1973	Air Suspension Inching Switch Circuit Failure
C1974	Air Reservoir Not Filling
C1975	IVD Plausibility failure
C1976	Audio Steering Wheel Switch Circuit – Open Circuit
C1977	Audio Steering Wheel Switch Circuit Short to GND
C1978	Audio Steering Wheel Switch Circuit short to Battery
C1979	IWE Solenoid Circuit Failure
C197A	Low Input Short to Ground
C197B	4×4 High Input Short to Ground
C197C	ABS Pressure Sensor Out of Calibration
C1980	IWE Solenoid Short to Battery
C1981	Front Driver's Seat Track Position Switch Circuit Fault
C1982	Front Driver's Seat Track Position Switch Circuit Short to Battery
C1983	Radar Sensor Fault
C1984	Radar Sensor Circuit Failure
C1985	Back-up Aid Disable Switch Stuck Low
C1986	VAPS Initial Speed Above Threshold
C1987	Yellow fault warning lamp indicator short to battery
C1988	Yellow fault warning lamp indicator circuit failure
C1989	Park Brake Apply and Release Switch Contacts Energized Simultaneously
C198A	Front Radar Signal Out of Range
C198B	Front Radar Internal Circuit Failure
C198C	Front Radar Aiming Not Completed
C198D	Front Radar Aiming Error
C198E	Lost Communication with Radar
C198F	Lost Communication with SwitchPack
C1990	Incomplete online tests
C1991	Module Calibration Failure
C1992	Vehicle Speed circuit failure
C1993	Air Suspension Pressure Sensor Circuit Failure
C1994	ESP Continuous Operation Fault
C1995	Air Suspension Moisture Ejector Valve Circuit Failure
C1996	Active Yaw and/or Roll Control Disabled
C1997	Pressure Controller plausibility fault
C1998	Module Calibration Not Complete
C1999	Vehicle Speed Signal Circuit Short to Ground
C199A	Pre Crash Safety System Switch Circuit Short to Battery
C199B	Adaptive Cruise Control Distance Switch Circuit Short to Battery
C199C	Invalid Data Received from Radar

C199D	Invalid Data Received from Motor Pretensioner Module
C1A01	Led
C1A02	Rotary Encoder Stuck In Intermediate Position
C1A03	Left Front Height Sensor
C1A04	Right Front Height Sensor
C1A05	Left Rear Height Sensor
C1A06	Right Rear Height Sensor
C1A07	Cross Articulation
C1A08	Pressure Sensor Supply
C1A10	Pressure Fluctuates When System Inactive
C1A11	Pressure Increases When System Inactive
C1A13	Pressure Does Not Decrease When Venting Gallery
C1A18	Pressure Increase Too Rapid When Filling Reservoir
C1A20	Pressure Increase Too Slow When Filling Reservoir
C1A24	No Temperature Increase When Compressor Requested
C1A27	Compressor
C1A28	Wrong Number of LEDs Illuminated
C1A29	Switch Activation Too Long
C1A30	Both Switches Pressed At The Same Time
C1A31	Left Front Corner Valve
C1A32	Right Front Corner Valve
C1A33	Left Rear Corner Valve
C1A34	Right Rear Corner Valve
C1A35	Reservoir Valve
C1A36	Exhaust Valve
C1A37	Front Cross-Link Valve
C1A38	Rear Cross-Link Valve
C1A41	Clutch Pedal Sensor
C1A43	Motor Supply
C1A47	Force Sensor
C1A48	Warning Lamp
C1A53	Manual Emergency Release Activated
C1A56	Left Front Tire Pressure Sensor and Transmitter Assembly
C1A57	Left Front Initiator
C1A58	Right Front Tire Pressure Sensor and Transmitter Assembly
C1A59	Right Front Initiator
C1A60	Left Rear Tire Pressure Sensor and Transmitter Assembly
C1A61	Left Rear Initiator
C1A62	Right Rear Tire Pressure Sensor and Transmitter Assembly
C1A63	Right Rear Initiator

C1A64	Spare Wheel Tire Pressure Sensor and Transmitter Assembly
C1A67	Forward Looking Sensor
C1A68	Left Front Height Sensor Supply
C1A69	Right Front Height Sensor Supply
C1A70	Left Rear Height Sensor Supply
C1A71	Right Rear Height Sensor Supply
C1A76	Valve Relay
C1A77	Valve Relay Supply Circuit
C1A78	Left Front Inlet Valve
C1A79	Left Front Outlet Valve
C1A80	Right Front Inlet Valve
C1A81	Right Front Outlet Valve
C1A82	Left Rear Inlet Valve
C1A83	Left Rear Outlet Valve
C1A84	Right Rear Inlet Valve
C1A85	Right Rear Outlet Valve
C1A86	Commutation Valve #1
C1A87	Commutation Valve #2
C1A88	High Pressure Switching Valve #1
C1A89	High Pressure Switching Valve #2
C1A90	Wheel Speed Sensor Supply
C1A95	Wheel Speed Sensor
C1A96	Brake Light Switch
C1A97	Lateral Accelerometer
C1A98	Yaw Rate Sensor
C1A99	Pressure Sensor
C1B00	Steering Angle Sensor
C1B02	Return Pump
C1B14	Sensor Supply Voltage A
C1B15	Sensor Supply Voltage B
C1B18	Module Power Supplies
C1B19	Door Status
C1B21	Compressor Brush Card Temperature Sensor
C1B22	Hill Descent Switch
C1D00	Park Brake Apply Switch
C1D01	Park Brake Release Switch
C1D18	Wheel Localisation Failed
C1D19	External Receiver Data Line
C1D21	Wheel module
C1D22	Steering Wheel Switch Right Module

C2000	Steering Angle Sensor Not Calibrated
C2001	Ride Height Calibration Error
C2002	Pneumatic Test Failure
C2003	Steering Wheel Switch Left Module
C2004	Headlamp washer relay B
C2005	Right Actuator
C2006	Left Actuator
C2007	Right Motor
C2008	Left Motor
C2009	Front Axle Wheel Speed Sensors Swapped
C200A	Rear Axle Wheel Speed Sensors Swapped
C200B	Steering Shaft Torque Sensor 1
C200C	Steering Shaft Torque Sensor 2
C200D	Motor Rotation Angle Sensor
C2010	Traction Control System Temporarily Disabled
C2011	Tire Pressure Wheel Module #1
C2012	Tire Pressure Wheel Module #2
C2013	Tire Pressure Wheel Module #3
C2014	Tire Pressure Wheel Module #4
C2200	Front Passenger's Seat Track Position Switch Circuit Fault
C2201	Front Passenger's Seat Track Position Switch Circuit Open
C2202	Front Passenger's Seat Track Position Switch Circuit Short to Ground
C2203	Front Passenger's Seat Track Position Switch Circuit Short to Battery
C2204	Front Passenger's Seat Track Position Switch Circuit Resistance Out of Range
C2205	Forward Seat Extender Position Switch Circuit Short to Battery
C2206	Rearward Seat Extender Position Switch Circuit Short to Battery
C2207	Forward/Rearward Seat Extender Potentiometer Feedback Circuit Short to Battery
C2208	Forward/Rearward Seat Extender Potentiometer Feedback Circuit Short to Gnd
C2209	Forward/Rearward Seat Extender Motor Stalled
C2250	Vehicle Speed Signal Circuit Short to Battery
C2251	Implausible Vehicle Speed Deceleration
C2300	Valve Supply Circuit Failure
C2301	Damper Supply Circuit Failure
C2302	Levelling Plausibility Failure
C2303	Reservoir Plausibility Failure
C2304	Damper Supply Circuit Short to Ground
C2305	Damper Supply Circuit Short to Battery

C2767	Reserved – TBD
C2768	Sensor Self Test Signal Faulted
C2769	Longitudinal Acceleration Sensor Electrical Failure
C276A	Longitudinal Acceleration Sensor Not Detected
C276B	Incorrect Longitudinal Acceleration Sensor Detected
C276C	Longitudinal Accelerometer Sensor Out Of Calibration
C2770	Longitudinal Acceleration Sensor Plausibility Failure
C2774	Pedal Travel Sensor Plausibility Failure
C2775	TC/AYC ON/OFF Switch Stuck Failure
C2777	Sensor Cluster BUS Failure
C2778	Sensor Power Supply Failure
C2779	Fault DTC (CM): Air Suspension Air Spring/Shock Solenoid Circuit Failure
C2780	ECU in manufacturer sub-state
C2781	Compressor solenoid circuit fault
C2782	Temperature sensor fault
C2783	Sensor Cluster Incorrect
C2784	RAM Checksum Failure
C2785	Sensor(s) Out of Calibration
C2786	Left Rear Sensor Open Circuit
C2787	Right Rear Sensor Open Circuit
C2788	Left Rear Center Sensor Open Circuit
C2789	Right Rear Center Sensor Open Circuit
C2790	LED Array Circuit Failure
C2791	Power Steering Motor Circuit Open
C2792	Power Steering Motor Circuit Short to Battery
C2793	Power Steering Motor Circuit Short to Ground
C2794	Power Steering Motor Overheat Protection
C2795	Brake Assist Unable to Initialize
C2796	Brake Pressure Transducer Supply Circuit Failure
C2797	Brake Pressure Transducer Supply Short to Battery
C2798	Brake Pressure Transducer Supply Short to Ground
C2799	Brake Pressure Transducer Supply Circuit Open
C279A	Invalid Brake Pressure Transducer Pressure Input Received
C2800	Brake Pressure Transducer Sense Circuit Open
C2801	Brake Pressure Transducer Sense Short to Ground
C2802	Brake Pressure Transducer Sense Short to Battery
C2803	Brake Pressure Transducer Sense Circuit Failure
C2804	Brake Pressure Transducer Ground Circuit Open
C2805	Brake Pressure Transducer Ground Circuit Short to Battery
C2806	Trailer Brake Output Circuit Short to Vbatt

C2807	Trailer Brakes Wiring Circuit Short to Ground
C2808	Trailer Brakes Output Overload