

**U wie User Interface - Codes beziehen sich auf interne Kommunikationsnetzwerke / Can-Bus**

U0001	High Speed CAN Communication Bus
U0002	High Speed CAN Communication Bus Performance
U0003	High Speed CAN Communication Bus (+) Open
U0004	High Speed CAN Communication Bus (+) Low
U0005	High Speed CAN Communication Bus (+) High
U0006	High Speed CAN Communication Bus (-) Open
U0007	High Speed CAN Communication Bus (-) Low
U0008	High Speed CAN Communication Bus (-) High
U0009	High Speed CAN Communication Bus (-) shorted to Bus (+)
U0010	Medium Speed CAN Communication Bus
U0011	Medium Speed CAN Communication Bus Performance
U0012	Medium Speed CAN Communication Bus (+) Open
U0013	Medium Speed CAN Communication Bus (+) Low
U0014	Medium Speed CAN Communication Bus (+) High
U0015	Medium Speed CAN Communication Bus (-) Open
U0016	Medium Speed CAN Communication Bus (-) Low
U0017	Medium Speed CAN Communication Bus (-) High
U0018	Medium Speed CAN Communication Bus (-) shorted to Bus (+)
U0019	Low Speed CAN Communication Bus
U0020	Low Speed CAN Communication Bus Performance
U0021	Low Speed CAN Communication Bus (+) Open
U0022	Low Speed CAN Communication Bus (+) Low
U0023	Low Speed CAN Communication Bus (+) High
U0024	Low Speed CAN Communication Bus (-) Open
U0025	Low Speed CAN Communication Bus (-) Low
U0026	Low Speed CAN Communication Bus (-) High
U0027	Low Speed CAN Communication Bus (-) shorted to Bus (+)
U0028	Vehicle Communication Bus A
U0029	Vehicle Communication Bus A Performance
U0030	Vehicle Communication Bus A (+) Open
U0031	Vehicle Communication Bus A (+) Low
U0032	Vehicle Communication Bus A (+) High
U0033	Vehicle Communication Bus A (-) Open
U0034	Vehicle Communication Bus A (-) Low
U0035	Vehicle Communication Bus A (-) High
U0036	Vehicle Communication Bus A (-) shorted to Bus A (+)
U0037	Vehicle Communication Bus B

U0038	Vehicle Communication Bus B Performance
U0039	Vehicle Communication Bus B (+) Open
U0040	Vehicle Communication Bus B (+) Low
U0041	Vehicle Communication Bus B (+) High
U0042	Vehicle Communication Bus B (-) Open
U0043	Vehicle Communication Bus B (-) Low
U0044	Vehicle Communication Bus B (-) High
U0045	Vehicle Communication Bus B (-) shorted to Bus B (+)
U0046	Vehicle Communication Bus C
U0047	Vehicle Communication Bus C Performance
U0048	Vehicle Communication Bus C (+) Open
U0049	Vehicle Communication Bus C (+) Low
U0050	Vehicle Communication Bus C (+) High
U0051	Vehicle Communication Bus C (-) Open
U0052	Vehicle Communication Bus C (-) Low
U0053	Vehicle Communication Bus C (-) High
U0054	Vehicle Communication Bus C (-) shorted to Bus C (+)
U0055	Vehicle Communication Bus D
U0056	Vehicle Communication Bus D Performance
U0057	Vehicle Communication Bus D (+) Open
U0058	Vehicle Communication Bus D (+) Low
U0059	Vehicle Communication Bus D (+) High
U0060	Vehicle Communication Bus D (-) Open
U0061	Vehicle Communication Bus D (-) Low
U0062	Vehicle Communication Bus D (-) High
U0063	Vehicle Communication Bus D (-) shorted to Bus D (+)
U0064	Vehicle Communication Bus E
U0065	Vehicle Communication Bus E Performance
U0066	Vehicle Communication Bus E (+) Open
U0067	Vehicle Communication Bus E (+) Low
U0068	Vehicle Communication Bus E (+) High
U0069	Vehicle Communication Bus E (-) Open
U0070	Vehicle Communication Bus E (-) Low
U0071	Vehicle Communication Bus E (-) High
U0072	Vehicle Communication Bus E (-) shorted to Bus E (+)
U0073	Control Module Communication Bus Off
U0074	Reserved by Document
U0075	Reserved by Document
U0076	Reserved by Document
U0077	Reserved by Document

U0078	Reserved by Document
U0079	Reserved by Document
U0080	Reserved by Document
U0081	Reserved by Document
U0082	Reserved by Document
U0083	Reserved by Document
U0084	Reserved by Document
U0085	Reserved by Document
U0086	Reserved by Document
U0087	Reserved by Document
U0088	Reserved by Document
U0089	Reserved by Document
U0090	Reserved by Document
U0091	Reserved by Document
U0092	Reserved by Document
U0093	Reserved by Document
U0094	Reserved by Document
U0095	Reserved by Document
U0096	Reserved by Document
U0097	Reserved by Document
U0098	Reserved by Document
U0099	Reserved by Document
U0100	Lost Communication With ECM/PCM "A"
U0101	Lost Communication with TCM
U0102	Lost Communication with Transfer Case Control Module
U0103	Lost Communication With Gear Shift Module
U0104	Lost Communication With Cruise Control Module
U0105	Lost Communication With Fuel Injector Control Module
U0106	Lost Communication With Glow Plug Control Module
U0107	Lost Communication With Throttle Actuator Control Module
U0108	Lost Communication With Alternative Fuel Control Module
U0109	Lost Communication With Fuel Pump Control Module
U0110	Lost Communication With Drive Motor Control Module
U0111	Lost Communication With Battery Energy Control Module "A"
U0112	Lost Communication With Battery Energy Control Module "B"
U0113	Lost Communication With Emissions Critical Control Information
U0114	Lost Communication With Four-Wheel Drive Clutch Control Module
U0115	Lost Communication With ECM/PCM "B"
U0116	Reserved by Document
U0117	Reserved by Document

U0118	Reserved by Document
U0119	Reserved by Document
U0120	Reserved by Document
U0121	Lost Communication With Anti-Lock Brake System (ABS) Control Module
U0122	Lost Communication With Vehicle Dynamics Control Module
U0123	Lost Communication With Yaw Rate Sensor Module
U0124	Lost Communication With Lateral Acceleration Sensor Module
U0125	Lost Communication With Multi-axis Acceleration Sensor Module
U0126	Lost Communication With Steering Angle Sensor Module
U0127	Lost Communication With Tire Pressure Monitor Module
U0128	Lost Communication With Park Brake Control Module
U0129	Lost Communication With Brake System Control Module
U0130	Lost Communication With Steering Effort Control Module
U0131	Lost Communication With Power Steering Control Module
U0132	Lost Communication With Ride Level Control Module
U0133	Reserved by Document
U0134	Reserved by Document
U0135	Reserved by Document
U0136	Reserved by Document
U0137	Reserved by Document
U0138	Reserved by Document
U0139	Reserved by Document
U0140	Lost Communication With Body Control Module
U0141	Lost Communication With Body Control Module "A"
U0142	Lost Communication With Body Control Module "B"
U0143	Lost Communication With Body Control Module "C"
U0144	Lost Communication With Body Control Module "D"
U0145	Lost Communication With Body Control Module "E"
U0146	Lost Communication With Gateway "A"
U0147	Lost Communication With Gateway "B"
U0148	Lost Communication With Gateway "C"
U0149	Lost Communication With Gateway "D"
U0150	Lost Communication With Gateway "E"
U0151	Lost Communication With Restraints Control Module
U0152	Lost Communication With Side Restraints Control Module
U0153	Lost Communication With Side Restraints Control Module
U0154	Lost Communication With Restraints Occupant Sensing Control Module
U0155	Lost Communication With Instrument Panel Cluster (IPC) Control Module
U0156	Lost Communication With Information Center "A"
U0157	Lost Communication With Information Center "B"

U0158	Lost Communication With Head Up Display
U0159	Lost Communication With Parking Assist Control Module
U0160	Lost Communication With Audible Alert Control Module
U0161	Lost Communication With Compass Module
U0162	Lost Communication With Navigation Display Module
U0163	Lost Communication With Navigation Control Module
U0164	Lost Communication With HVAC Control Module
U0165	Lost Communication With HVAC Control Module
U0166	Lost Communication With Auxiliary Heater Control Module
U0167	Lost Communication With Vehicle Immobilizer Control Module
U0168	Lost Communication With Vehicle Security Control Module
U0169	Lost Communication With Sunroof Control Module
U0170	Lost Communication With "Restraints System Sensor A"
U0171	Lost Communication With "Restraints System Sensor B"
U0172	Lost Communication With "Restraints System Sensor C"
U0173	Lost Communication With "Restraints System Sensor D"
U0174	Lost Communication With "Restraints System Sensor E"
U0175	Lost Communication With "Restraints System Sensor F"
U0176	Lost Communication With "Restraints System Sensor G"
U0177	Lost Communication With "Restraints System Sensor H"
U0178	Lost Communication With "Restraints System Sensor I"
U0179	Lost Communication With "Restraints System Sensor J"
U0180	Lost Communication With Automatic Lighting Control Module
U0181	Lost Communication With Headlamp Leveling Control Module
U0182	Lost Communication With Lighting Control Module
U0183	Lost Communication With Lighting Control Module
U0184	Lost Communication With Radio
U0185	Lost Communication With Antenna Control Module
U0186	Lost Communication With Audio Amplifier
U0187	Lost Communication With Digital Disc Player/Changer Module "A"
U0188	Lost Communication With Digital Disc Player/Changer Module "B"
U0189	Lost Communication With Digital Disc Player/Changer Module "C"
U0190	Lost Communication With Digital Disc Player/Changer Module "D"
U0191	Lost Communication With Television
U0192	Lost Communication With Personal Computer
U0193	Lost Communication With "Digital Audio Control Module A"
U0194	Lost Communication With "Digital Audio Control Module B"
U0195	Lost Communication With Subscription Entertainment Receiver Module
U0196	Lost Communication With Rear Seat Entertainment Control Module
U0197	Lost Communication With Telephone Control Module

U0198	Lost Communication With Telematic Control Module
U0199	Lost Communication With "Door Control Module A"
U0200	Lost Communication With "Door Control Module B"
U0201	Lost Communication With "Door Control Module C"
U0202	Lost Communication With "Door Control Module D"
U0203	Lost Communication With "Door Control Module E"
U0204	Lost Communication With "Door Control Module F"
U0205	Lost Communication With "Door Control Module G"
U0206	Lost Communication With Folding Top Control Module
U0207	Lost Communication With Movable Roof Control Module
U0208	Lost Communication With "Seat Control Module A"
U0209	Lost Communication With "Seat Control Module B"
U0210	Lost Communication With "Seat Control Module C"
U0211	Lost Communication With "Seat Control Module D"
U0212	Lost Communication With Steering Column Control Module
U0213	Lost Communication With Mirror Control Module
U0214	Lost Communication With Remote Function Actuation
U0215	Lost Communication With "Door Switch A"
U0216	Lost Communication With "Door Switch B"
U0217	Lost Communication With "Door Switch C"
U0218	Lost Communication With "Door Switch D"
U0219	Lost Communication With "Door Switch E"
U0220	Lost Communication With "Door Switch F"
U0221	Lost Communication With "Door Switch G"
U0222	Lost Communication With "Door Window Motor A"
U0223	Lost Communication With "Door Window Motor B"
U0224	Lost Communication With "Door Window Motor C"
U0225	Lost Communication With "Door Window Motor D"
U0226	Lost Communication With "Door Window Motor E"
U0227	Lost Communication With "Door Window Motor F"
U0228	Lost Communication With "Door Window Motor G"
U0229	Lost Communication With Heated Steering Wheel Module
U0230	Lost Communication With Rear Gate Module
U0231	Lost Communication With Rain Sensing Module
U0232	Lost Communication With Side Obstacle Detection Control Module
U0233	Lost Communication With Side Obstacle Detection Control Module
U0234	Lost Communication With Convenience Recall Module
U0235	Lost Communication With Cruise Control Front Distance Range Sensor
U0300	Internal Control Module Software Incompatibility
U0301	Software Incompatibility with ECM/PCM

U0302	Software Incompatibility with Transmission Control Module
U0303	Software Incompatibility with Transfer Case Control Module
U0304	Software Incompatibility with Gear Shift Control Module
U0305	Software Incompatibility with Cruise Control Module
U0306	Software Incompatibility with Fuel Injector Control Module
U0307	Software Incompatibility with Glow Plug Control Module
U0308	Software Incompatibility with Throttle Actuator Control Module
U0309	Software Incompatibility with Alternative Fuel Control Module
U0310	Software Incompatibility with Fuel Pump Control Module
U0311	Software Incompatibility with Drive Motor Control Module
U0312	Software Incompatibility with Battery Energy Control Module A
U0313	Software Incompatibility with Battery Energy Control Module B
U0314	Software Incompatibility with Four-Wheel Drive Clutch Control Module
U0315	Software Incompatibility with Anti-Lock Brake System Control Module
U0316	Software Incompatibility with Vehicle Dynamics Control Module
U0317	Software Incompatibility with Park Brake Control Module
U0318	Software Incompatibility with Brake System Control Module
U0319	Software Incompatibility with Steering Effort Control Module
U0320	Software Incompatibility with Power Steering Control Module
U0321	Software Incompatibility with Ride Level Control Module
U0322	Software Incompatibility with Body Control Module
U0323	Software Incompatibility with Instrument Panel Control Module
U0324	Software Incompatibility with HVAC Control Module
U0325	Software Incompatibility with Auxiliary Heater Control Module
U0326	Software Incompatibility with Vehicle Immobilizer Control Module
U0327	Software Incompatibility with Vehicle Security Control Module
U0328	Software Incompatibility with Steering Angle Sensor Module
U0329	Software Incompatibility with Steering Column Control Module
U0330	Software Incompatibility with Tire Pressure Monitor Module
U0331	Software Incompatibility with Body Control Module "A"
U0400	Invalid Data Received
U0401	Invalid Data Received From ECM/PCM
U0402	Invalid Data Received From Transmission Control Module
U0403	Invalid Data Received From Transfer Case Control Module
U0404	Invalid Data Received From Gear Shift Control Module
U0405	Invalid Data Received From Cruise Control Module
U0406	Invalid Data Received From Fuel Injector Control Module
U0407	Invalid Data Received From Glow Plug Control Module
U0408	Invalid Data Received From Throttle Actuator Control Module
U0409	Invalid Data Received From Alternative Fuel Control Module

U0410	Invalid Data Received From Fuel Pump Control Module
U0411	Invalid Data Received From Drive Motor Control Module
U0412	Invalid Data Received From Battery Energy Control Module A
U0413	Invalid Data Received From Battery Energy Control Module B
U0414	Invalid Data Received From Four-Wheel Drive Clutch Control Module
U0415	Invalid Data Received From Anti-Lock Brake System Control Module
U0416	Invalid Data Received From Vehicle Dynamics Control Module
U0417	Invalid Data Received From Park Brake Control Module
U0418	Invalid Data Received From Brake System Control Module
U0419	Invalid Data Received From Steering Effort Control Module
U0420	Invalid Data Received From Power Steering Control Module
U0421	Invalid Data Received From Ride Level Control Module
U0422	Invalid Data Received From Body Control Module
U0423	Invalid Data Received From Instrument Panel Control Module
U0424	Invalid Data Received From HVAC Control Module
U0425	Invalid Data Received From Auxiliary Heater Control Module
U0426	Invalid Data Received From Vehicle Immobilizer Control Module
U0427	Invalid Data Received From Vehicle Security Control Module
U0428	Invalid Data Received From Steering Angle Sensor Module
U0429	Invalid Data Received From Steering Column Control Module
U0430	Invalid Data Received From Tire Pressure Monitor Module
U0431	Invalid Data Received From Body Control Module "A"