

B wie Body - diese Codes beziehen sich auf den Fahrzeug-Body / die Karosse (z.B. Gurtschloß, Türkontakte, Wischer usw)

B0000 – B0999 (Body systems)

B0000	ISO/SAE Reserved / Vehicle speed information circuit malfunction (Chevy, GM)
B0001	Driver Frontal Stage 1 Deployment Control (Subfault)
B0002	Driver Frontal Stage 2 Deployment Control (Subfault)
B0003	Driver Frontal Stage 3 Deployment Control (Subfault)
B0004	Driver Knee Bolster Deployment Control (Subfault)
B0005	Collapsible Steering Column Deployment Control (Subfault)
B0006	ISO/SAE Reserved
B0007	ISO/SAE Reserved
B0008	ISO/SAE Reserved
B0009	ISO/SAE Reserved
B000A	ISO/SAE Reserved
B000B	ISO/SAE Reserved
B000C	ISO/SAE Reserved
B000D	ISO/SAE Reserved
B000E	ISO/SAE Reserved
B000F	ISO/SAE Reserved
B0010	Passenger Frontal Stage 1 Deployment Control (Subfault)
B0011	Passenger Frontal Stage 2 Deployment Control (Subfault)
B0012	Passenger Frontal Stage 3 Deployment Control (Subfault)
B0013	Passenger Knee Bolster Deployment Control (Subfault)
B0014	ISO/SAE Reserved
B0015	ISO/SAE Reserved
B0016	ISO/SAE Reserved
B0017	ISO/SAE Reserved
B0018	ISO/SAE Reserved
B0019	ISO/SAE Reserved
B001A	ISO/SAE Reserved
B001B	ISO/SAE Reserved
B001C	ISO/SAE Reserved
B001D	ISO/SAE Reserved
B001E	ISO/SAE Reserved
B001F	ISO/SAE Reserved
B0020	Left Side Airbag Deployment Control (Subfault)
B0021	Left Curtain Deployment Control 1 (Subfault)
B0022	Left Curtain Deployment Control 2 (Subfault)
B0023	ISO/SAE Reserved

B0024	ISO/SAE Reserved
B0025	ISO/SAE Reserved
B0026	ISO/SAE Reserved
B0027	ISO/SAE Reserved
B0028	Right Side Airbag Deployment Control (Subfault)
B0029	Right Curtain Deployment Control 1 (Subfault)
B002A	Right Curtain Deployment Control 2 (Subfault)
B002B	ISO/SAE Reserved
B002C	ISO/SAE Reserved
B002D	ISO/SAE Reserved
B002E	ISO/SAE Reserved
B002F	ISO/SAE Reserved
B0030	Second Row Left Side Airbag Deployment Control (Subfault)
B0031	Second Row Left Frontal Stage 1 Deployment Control (Subfault)
B0032	Second Row Left Frontal Stage 2 Deployment Control (Subfault)
B0033	Second Row Left Frontal Stage 3 Deployment Control (Subfault)
B0034	ISO/SAE Reserved
B0035	ISO/SAE Reserved
B0036	ISO/SAE Reserved
B0037	ISO/SAE Reserved
B0038	Second Row Right Side Airbag Deployment Control (Subfault)
B0039	Second Row Right Frontal Stage 1 Deployment Control (Subfault)
B003A	Second Row Right Frontal Stage 2 Deployment Control (Subfault)
B003B	Second Row Right Frontal Stage 3 Deployment Control (Subfault)
B003C	ISO/SAE Reserved
B003D	ISO/SAE Reserved
B003E	ISO/SAE Reserved
B003F	ISO/SAE Reserved
B0040	Third Row Left Side Airbag Deployment Control (Subfault)
B0041	Third Row Left Frontal Stage 1 Deployment Control (Subfault)
B0042	Third Row Left Frontal Stage 2 Deployment Control (Subfault)
B0043	Third Row Left Frontal Stage 3 Deployment Control (Subfault)
B0044	ISO/SAE Reserved
B0045	ISO/SAE Reserved
B0046	ISO/SAE Reserved
B0047	ISO/SAE Reserved
B0048	Third Row Right Side Airbag Deployment Control (Subfault)
B0049	Third Row Right Frontal Stage 1 Deployment Control (Subfault)
B004A	Third Row Right Frontal Stage 2 Deployment Control (Subfault)
B004B	Third Row Right Frontal Stage 3 Deployment Control (Subfault)

B004C	ISO/SAE Reserved
B004D	ISO/SAE Reserved
B004E	ISO/SAE Reserved
B004F	ISO/SAE Reserved
B0050	Driver Seatbelt Sensor (Subfault)
B0051	First Row Center Seatbelt Sensor (Subfault)
B0052	Passenger Seatbelt Sensor (Subfault)
B0053	Second Row Left Seatbelt Sensor (Subfault)
B0054	Second Row Center Seatbelt Sensor (Subfault)
B0055	Second Row Right Seatbelt Sensor (Subfault)
B0056	Third Row Left Seatbelt Sensor (Subfault)
B0057	Third Row Center Seatbelt Sensor (Subfault)
B0058	Third Row Right Seatbelt Sensor (Subfault)
B0059	ISO/SAE Reserved
B005A	ISO/SAE Reserved
B005B	ISO/SAE Reserved
B005C	ISO/SAE Reserved
B005D	ISO/SAE Reserved
B005E	ISO/SAE Reserved
B005F	ISO/SAE Reserved
B0060	Driver Seatbelt Tension Sensor (Subfault)
B0061	Passenger Seatbelt Tension Sensor (Subfault)
B0062	ISO/SAE Reserved
B0063	ISO/SAE Reserved
B0064	ISO/SAE Reserved
B0065	ISO/SAE Reserved
B0066	ISO/SAE Reserved
B0067	ISO/SAE Reserved
B0068	ISO/SAE Reserved
B0069	ISO/SAE Reserved
B006A	ISO/SAE Reserved
B006B	ISO/SAE Reserved
B006C	ISO/SAE Reserved
B006D	ISO/SAE Reserved
B006E	ISO/SAE Reserved
B006F	ISO/SAE Reserved
B0070	Driver Seatbelt Pretensioner "A" Deployment Control (Subfault)
B0071	First Row Center Seatbelt Pretensioner Deployment Control (Subfault)
B0072	Passenger Seatbelt Pretensioner "A" Deployment Control (Subfault)
B0073	Second Row Left Seatbelt Pretensioner Deployment Control (Subfault)

B0074	Second Row Center Seatbelt Pretensioner Deployment Control (Subfault)
B0075	Second Row Right Seatbelt Pretensioner Deployment Control (Subfault)
B0076	Third Row Left Seatbelt Pretensioner Deployment Control (Subfault)
B0077	Third Row Center Seatbelt Pretensioner Deployment Control (Subfault)
B0078	Third Row Right Seatbelt Pretensioner Deployment Control (Subfault)
B0079	Driver Seatbelt Pretensioner "B" Deployment Control (Subfault)
B007A	Passenger Seatbelt Pretensioner "B" Deployment Control (Subfault)
B007B	Second Row Left Seatbelt Pretensioner "B" Deployment Control (Subfault)
B007C	Second Row Right Seatbelt Pretensioner "B" Deployment Control (Subfault)
B007D	Second Row Center Seatbelt Pretensioner "B" Deployment Control (Subfault)
B007E	Driver Seatbelt Pretensioner "C" Deployment Control (Subfault)
B007F	Passenger Seatbelt Pretensioner "C" Deployment Control (Subfault)
B0080	Driver Seatbelt Load Limiter Deployment Control (Subfault)
B0081	First Row Center Seatbelt Load Limiter Deployment Control (Subfault)
B0082	Passenger Seatbelt Load Limiter Deployment Control (Subfault)
B0083	Second Row Left Seatbelt Load Limiter Deployment Control (Subfault)
B0084	Second Row Center Seatbelt Load Limiter Deployment Control (Subfault)
B0085	Second Row Right Seatbelt Load Limiter Deployment Control (Subfault)
B0086	Third Row Left Seatbelt Load Limiter Deployment Control (Subfault)
B0087	Third Row Center Seatbelt Load Limiter Deployment Control (Subfault)
B0088	Third Row Right Seatbelt Load Limiter Deployment Control (Subfault)
B0089	ISO/SAE Reserved
B008A	ISO/SAE Reserved
B008B	ISO/SAE Reserved
B008C	ISO/SAE Reserved
B008D	ISO/SAE Reserved
B008E	ISO/SAE Reserved
B008F	ISO/SAE Reserved
B0090	Left Frontal Restraints Sensor (Subfault)
B0091	Left Side Restraints Sensor 1 (Subfault)
B0092	Left Side Restraints Sensor 2 (Subfault)
B0093	Left Side Restraints Sensor 3 (Subfault)
B0094	Center Frontal Restraints Sensor (Subfault)
B0095	Right Frontal Restraints Sensor (Subfault)
B0096	Right Side Restraints Sensor 1 (Subfault)
B0097	Right Side Restraints Sensor 2 (Subfault)
B0098	Right Side Restraints Sensor 3 (Subfault)
B0099	Roll Over Sensor (Subfault)
B009A	Left Side Restraints Sensor 4 (Subfault)

B009B	Left Side Restraints Sensor 5 (Subfault)
B009C	Left Side Restraints Sensor 6 (Subfault)
B009D	Right Side Restraints Sensor 4 (Subfault)
B009E	Right Side Restraints Sensor 5 (Subfault)
B009F	Right Side Restraints Sensor 6 (Subfault)
B00A0	Occupant Classification System (Subfault)
B00A1	Occupant Position System (Subfault)
B00A2	ISO/SAE Reserved
B00A3	ISO/SAE Reserved
B00A4	ISO/SAE Reserved
B00A5	ISO/SAE Reserved
B00A6	ISO/SAE Reserved
B00A7	ISO/SAE Reserved
B00A8	ISO/SAE Reserved
B00A9	ISO/SAE Reserved
B00AA	ISO/SAE Reserved
B00AB	ISO/SAE Reserved
B00AC	ISO/SAE Reserved
B00AD	ISO/SAE Reserved
B00AE	ISO/SAE Reserved
B00AF	ISO/SAE Reserved
B00B0	Driver Seat Occupant Classification Sensor "A" (Subfault)
B00B1	Driver Seat Occupant Classification Sensor "B" (Subfault)
B00B2	Driver Seat Occupant Classification Sensor "C" (Subfault)
B00B3	Driver Seat Occupant Classification Sensor "D" (Subfault)
B00B4	Driver Seat Occupant Classification Sensor "E" (Subfault)
B00B5	Driver Seat Track Position Restraints Sensor (Subfault)
B00B6	Driver Seat Recline Position Restraints Sensor (Subfault)
B00B7	Driver Seat Occupant Position Sensor "A" (Subfault)
B00B8	Driver Seat Occupant Position Sensor "B" (Subfault)
B00B9	Driver Seat Occupant Position Sensor "C" (Subfault)
B00BA	Driver Seat Occupant Position Sensor "D" (Subfault)
B00BB	Driver Seat Occupant Position Sensor "E" (Subfault)
B00BC	ISO/SAE Reserved
B00BD	ISO/SAE Reserved
B00BE	ISO/SAE Reserved
B00BF	ISO/SAE Reserved
B00C0	Passenger Seat Occupant Classification Sensor "A" (Subfault)
B00C1	Passenger Seat Occupant Classification Sensor "B" (Subfault)
B00C2	Passenger Seat Occupant Classification Sensor "C" (Subfault)

B00C3	Passenger Seat Occupant Classification Sensor "D" (Subfault)
B00C4	Passenger Seat Occupant Classification Sensor "E" (Subfault)
B00C5	Passenger Seat Track Position Restraints Sensor (Subfault)
B00C6	Passenger Seat Recline Position Restraints Sensor (Subfault)
B00C7	Passenger Seat Occupant Position Sensor "A" (Subfault)
B00C8	Passenger Seat Occupant Position Sensor "B" (Subfault)
B00C9	Passenger Seat Occupant Position Sensor "C" (Subfault)
B00CA	Passenger Seat Occupant Position Sensor "D" (Subfault)
B00CB	Passenger Seat Occupant Position Sensor "E" (Subfault)
B00CC	ISO/SAE Reserved
B00CD	ISO/SAE Reserved
B00CE	ISO/SAE Reserved
B00CF	ISO/SAE Reserved
B00D0	Driver Seatbelt Indicator (Subfault)
B00D1	Passenger Seatbelt Indicator (Subfault)
B00D2	Restraint System Malfunction Indicator 1 (Subfault)
B00D3	Restraint System Malfunction Indicator 2 (Subfault)
B00D4	Restraint System Malfunction Audible Indicator (Subfault)
B00D5	Restraint System Passenger Disable Indicator (Subfault)
B00D6	ISO/SAE Reserved
B00D7	ISO/SAE Reserved
B00D8	ISO/SAE Reserved
B00D9	ISO/SAE Reserved
B00DA	ISO/SAE Reserved
B00DB	ISO/SAE Reserved
B00DC	ISO/SAE Reserved
B00DD	ISO/SAE Reserved
B00DE	ISO/SAE Reserved
B00DF	Passenger Restraints Disable Switch (Subfault)
B00E0	Third Row Left Seatbelt Pretensioner "B" Deployment Control (Subfault)
B00E1	Third Row Right Seatbelt Pretensioner "B" Deployment Control (Subfault)
B00E2	Third Row Center Seatbelt Pretensioner "B" Deployment Control (Subfault)
B00E3	Second Row Left Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E4	Second Row Right Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E5	Second Row Center Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E6	Third Row Right Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E7	Third Row Left Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E8	Third Row Center Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E9	ISO/SAE Reserved

B0101 Left Front Impact Sensor
B0500 Passenger Temperature Control "Warmer" Switch - Circuit Range/Performance

B1000 – B1999 (Manufacturer defined)

B1000 Manufacturer Controlled DTC
B1039 Audio [+] output #2 (RF) circuit open
B1200 Climate Control Pushbutton Circuit Failure
B1201 Fuel Sender Circuit Failure
B1202 Fuel Sender Circuit Open
B1203 Fuel Sender Circuit Short To Battery
B1204 Fuel Sender Circuit Short To Ground
B1205 EIC Switch-1 Assembly Circuit Failure
B1206 EIC Switch-1 Assembly Circuit Open
B1207 EIC Switch-1 Assembly Circuit Short To Battery
B1208 EIC Switch-1 Assembly Circuit Short To Ground
B1209 EIC Switch-2 Assembly Circuit Failure
B1210 EIC Switch-2 Assembly Circuit Open
B1211 EIC Switch-2 Assembly Circuit Short To Battery
B1212 EIC Switch-2 Assembly Circuit Short To Ground
B1213 Anti-Theft Number of Programmed Keys Is Below Minimum
B1214 Running Board Lamp Circuit Failure
B1215 Running Board Lamp Circuit Short to Battery
B1216 Emergency & Road Side Assistance Switch Circuit Short to Ground
B1217 Horn Relay Coil Circuit Failure
B1218 Horn Relay Coil Circuit Short to Vbatt
B1219 Fuel Tank Pressure Sensor Circuit Failure
B1220 Fuel Tank Pressure Sensor Circuit Open
B1222 Fuel Temperature Sensor #1 Circuit Failure
B1223 Fuel Temperature Sensor #1 Circuit Open
B1224 Fuel Temperature Sensor #1 Circuit Short to Battery
B1225 Fuel Temperature Sensor #1 Circuit Short to Ground
B1226 Fuel Temperature Sensor #2 Circuit Failure
B1227 Fuel Temperature Sensor #2 Circuit Open
B1228 Fuel Temperature Sensor #2 Circuit Short to Battery
B1229 Fuel Temperature Sensor #2 Circuit Short to Ground
B1231 Longitudinal Acceleration Threshold Exceeded
B1232 See Manufacturer
B1233 Glass Break Sensor Failure
B1234 Mirror Switch Invalid Code

B1235	Window Feedback Failure
B1236	Window Feedback Loss of Signal
B1237	Window Feedback Out of Range
B1238	Over Temperature Fault
B1239	Air Flow Blend Door Driver Circuit Failure
B1240	Wiper Washer Rear Pump Relay Circuit Failure
B1241	Wiper Washer Rear Pump Relay Circuit Short to Battery
B1242	Air Flow Recirculation Door Driver Circuit Failure
B1243	Express Window Down Switch Circuit Short to Battery
B1244	Wiper Rear Motor Run Relay Circuit Failure
B1245	Wiper Rear Motor Run Relay Circuit Short to Battery
B1246	Dim Panel Potentiometer Switch Circuit Failure
B1247	Panel Dim Switch Circuit Open
B1248	Passenger's Seatback Autoglide Rearward Switch Circuit Short to Ground
B1249	Blend Door Failure
B1250	Air Temperature Internal Sensor Circuit Failure
B1251	Air Temperature Internal Sensor Circuit Open
B1252	Air Temperature Internal Sensor Circuit Short To Battery
B1253	Air Temperature Internal Sensor Circuit Short To Ground
B1254	Air Temperature External Sensor Circuit Failure
B1255	Air Temperature External Sensor Circuit Open
B1256	Air Temperature External Sensor Circuit Short To Battery
B1257	Air Temperature External Sensor Circuit Short To Ground
B1258	Solar Radiation Sensor Circuit Failure
B1259	Solar Radiation Sensor Circuit Open
B1260	Solar Radiation Sensor Circuit Short To Battery
B1261	Solar Radiation Sensor Circuit Short To Ground
B1262	Servo Motor Defrost Circuit Failure
B1263	Servo Motor Vent Circuit Failure
B1264	Servo Motor Foot Circuit Failure
B1265	Servo Motor Coolair Bypass Circuit Failure
B1266	Servo Motor Airintake Left Circuit Failure
B1267	Servo Motor Airintake Right Circuit Failure
B1268	Servo Motor Potentiometer Defrost Circuit Failure
B1269	Servo Motor Potentiometer Defrost Circuit Open
B1270	Servo Motor Potentiometer Defrost Circuit Short To Battery
B1271	Servo Motor Potentiometer Defrost Circuit Short To Ground
B1272	Servo Motor Potentiometer Vent Circuit Failure
B1273	Servo Motor Potentiometer Vent Circuit Open
B1274	Servo Motor Potentiometer Vent Circuit Short To Battery

B1275	Servo Motor Potentiometer Vent Circuit Short To Ground
B1276	Servo Motor Potentiometer Foot Circuit Failure
B1277	Servo Motor Potentiometer Foot Circuit Open
B1278	Servo Motor Potentiometer Foot Circuit Short To Battery
B1279	Servo Motor Potentiometer Foot Circuit Short To Ground
B1280	Servo Motor Potentiometer Coolair Circuit Failure
B1281	Servo Motor Potentiometer Coolair Circuit Open
B1282	Servo Motor Potentiometer Coolair Circuit Short To Battery
B1283	Servo Motor Potentiometer Coolair Circuit Short To Ground
B1284	Servo Motor Potentiometer Airintake Left Circuit Failure
B1285	Servo Motor Potentiometer Airintake Left Circuit Open
B1286	Servo Motor Potentiometer Airintake Left Circuit Short To Battery
B1287	Servo Motor Potentiometer Airintake Left Circuit Short To Ground
B1288	Servo Motor Potentiometer Airintake Right Circuit Failure
B1289	Servo Motor Potentiometer Airintake Right Circuit Open
B1290	Servo Motor Potentiometer Airintake Right Circuit Short To Battery
B1291	Servo Motor Potentiometer Airintake Right Circuit Short To Ground
B1292	Battery Power Relay Circuit Failure
B1293	Battery Power Relay Circuit Open
B1294	Battery Power Relay Circuit Short To Battery
B1295	Battery Power Relay Circuit Short To Ground
B1296	Power Supply Sensor Circuit Failure
B1297	Power Supply Sensor Circuit Open
B1298	Power Supply Sensor Circuit Short To Battery
B1299	Power Supply Sensor Circuit Short To Ground
B1300	Power Door Lock Circuit Failure
B1301	Power Door Lock Circuit Open
B1302	Accessory Delay Relay Coil Circuit Failure
B1303	Accessory Delay Relay Coil Circuit Open
B1304	Accessory Delay Relay Coil Circuit Short To Battery
B1305	Accessory Delay Relay Coil Circuit Short To Ground
B1306	Oil Level Switch Circuit Open
B1307	Oil Level Switch Circuit Short To Battery
B1308	Oil Level Switch Circuit Short To Ground
B1309	Power Door Lock Circuit Short To Ground
B1310	Power Door Unlock Circuit Failure
B1311	Power Door Unlock Circuit Open
B1312	Lamp Headlamp Input Circuit Short To Battery
B1313	Battery Saver Relay Coil Circuit Failure
B1314	Battery Saver Relay Coil Circuit Open

B1315	Battery Saver Relay Coil Circuit Short To Battery
B1316	Battery Saver Relay Coil Circuit Short To Ground
B1317	Battery Voltage High
B1318	Battery Voltage Low
B1319	Driver Door Ajar Circuit Failure
B1320	Driver Door Ajar Circuit Open
B1321	Driver Door Ajar Circuit Short To Battery
B1322	Driver Door Ajar Circuit Short To Ground
B1323	Door Ajar Lamp Circuit Failure
B1324	Door Ajar Lamp Circuit Open
B1325	Door Ajar Lamp Circuit Short To Battery
B1326	Door Ajar Lamp Circuit Short To Ground
B1327	Passenger Door Ajar Circuit Failure
B1328	Passenger Door Ajar Circuit Open
B1329	Passenger Door Ajar Circuit Short To Battery
B1330	Passenger Door Ajar Circuit Short To Ground
B1331	Decklid Ajar Rear Door Circuit Failure
B1332	Decklid Ajar Rear Door Circuit Open
B1333	Decklid Ajar Rear Door Circuit Short To Battery
B1334	Decklid Ajar Rear Door Circuit Short To Ground
B1335	Door Ajar RR Circuit Failure
B1336	Door Ajar RR Circuit Open
B1337	Door Ajar RR Circuit Short To Battery
B1338	Door Ajar RR Circuit Short To Ground
B1339	Chime Input Request Circuit Short To Battery
B1340	Chime Input Request Circuit Short To Ground
B1341	Power Door Unlock Circuit Short To Ground
B1342	ECU Is Defective
B1343	Heated Backlite Input Circuit Failure
B1344	Heated Backlite Input Circuit Open
B1345	Heated Backlite Input Circuit Short To Ground
B1346	Heated Backlite Input Circuit Short To Battery
B1347	Heated Backlite Relay Circuit Failure
B1348	Heated Backlite Relay Circuit Open
B1349	Heated Backlite Relay Short To Battery
B1350	Heated Backlite Relay Short To Ground
B1351	Ignition Key-In Circuit Short To Battery
B1352	Ignition Key-In Circuit Failure
B1353	Ignition Key-In Circuit Open
B1354	Ignition Key-In Circuit Short To Ground

B1355	Ignition Run Circuit Failure
B1356	Ignition Run Circuit Open
B1357	Ignition Run Circuit Short To Battery
B1358	Ignition Run Circuit Short To Ground
B1359	Ignition Run/Acc Circuit Failure
B1360	Ignition Run/Acc Circuit Open
B1361	Ignition Run/Acc Circuit Short To Battery
B1362	Ignition Run/Acc Circuit Short To Ground
B1363	Ignition Start Circuit Failure
B1364	Ignition Start Circuit Open
B1365	Ignition Start Circuit Short To Battery
B1366	Ignition Start Circuit Short To Ground
B1367	Ignition Tach Circuit Failure
B1368	Ignition Tach Circuit Open
B1369	Ignition Tach Circuit Short To Battery
B1370	Ignition Tach Circuit Short To Ground
B1371	Illuminated Entry Relay Circuit Failure
B1372	Illuminated Entry Relay Circuit Open
B1373	Illuminated Entry Relay Short To Battery
B1374	Illuminated Entry Relay Short To Ground
B1375	Oil Change Lamp Circuit Open
B1376	Oil Change Lamp Circuit Short To Battery
B1377	Oil Change Lamp Circuit Failure
B1378	Oil Change Lamp Circuit Short To Ground
B1379	Oil Change Reset Button Circuit Short To Ground
B1380	Oil Change Reset Button Circuit Failure
B1381	Oil Change Reset Button Circuit Open
B1382	Oil Change Reset Button Circuit Short To Battery
B1383	Oil Level Lamp Circuit Short To Battery
B1384	Oil Level Lamp Circuit Failure
B1385	Oil Level Lamp Circuit Open
B1386	Oil Level Lamp Circuit Short To Ground
B1387	Oil Temperature Sensor Circuit Open
B1388	Oil Temperature Sensor Circuit Short To Battery
B1389	Oil Temperature Sensor Circuit Failure
B1390	Oil Temperature Sensor Circuit Short To Ground
B1391	Oil Level Switch Circuit Failure
B1392	Power Door Memory Lock Relay Circuit Failure
B1393	Power Door Memory Lock Relay Circuit Open
B1394	Power Door Memory Lock Relay Circuit Short To Battery

B1395	Power Door Memory Lock Relay Circuit Short To Ground
B1396	Power Door Lock Circuit Short To Battery
B1397	Power Door Unlock Circuit Short To Battery
B1398	Driver Power Window One Touch Window Relay Circuit Failure
B1399	Driver Power Window One Touch Window Relay Circuit Open
B1400	Driver Power Window One Touch Window Relay Circuit Short To Battery
B1401	Driver Power Window One Touch Window Relay Circuit Short To Ground
B1402	Driver Power Window Down Switch Circuit Failure
B1403	Driver Power Window Up Switch Circuit Failure
B1404	Driver Power Window Down Circuit Open
B1405	Driver Power Window Down Circuit Short To Battery
B1406	Driver Power Window Down Circuit Short To Ground
B1407	Driver Power Window Up Circuit Open
B1408	Driver Power Window Up Circuit Short To Battery
B1409	Driver Power Window Up Circuit Short To Ground
B1410	Driver Power Window Motor Circuit Failure
B1411	Driver Power Window Motor Circuit Open
B1412	Driver Power Window Motor Circuit Short To Battery
B1413	Driver Power Window Motor Circuit Short To Ground
B1414	Power Window LR Motor Circuit Failure
B1415	Power Window LR Motor Circuit Open
B1416	Power Window LR Motor Circuit Short To Battery
B1417	Power Window LR Motor Circuit Short To Ground
B1418	Passenger Power Window Motor Circuit Failure
B1419	Passenger Power Window Motor Circuit Open
B1420	Passenger Power Window Motor Circuit Short To Battery
B1421	Passenger Power Window Motor Circuit Short To Ground
B1422	Power Window RR Motor Circuit Failure
B1423	Power Window RR Motor Circuit Open
B1424	Power Window RR Motor Circuit Short To Battery
B1425	Power Window RR Motor Circuit Short To Ground
B1426	Lamp Seat Belt Circuit Short To Battery
B1427	Lamp Seat Belt Circuit Open
B1428	Lamp Seat Belt Circuit Failure
B1429	Lamp Seat Belt Circuit Short To Ground
B1430	Seat Belt Switch Circuit Short To Ground
B1431	Wiper Brake/Run Relay Circuit Failure
B1432	Wiper Brake/Run Relay Circuit Short To Battery
B1433	Wiper Brake/Run Relay Circuit Short To Ground
B1434	Wiper Hi/Low Speed Relay Coil Circuit Failure

B1435	Wiper Hi/Low Speed Relay Coil Circuit Open
B1436	Wiper Hi/Low Speed Relay Coil Circuit Short To Battery
B1437	Wiper Hi/Low Speed Relay Coil Circuit Short To Ground
B1438	Wiper Mode Select Switch Circuit Failure
B1439	Wiper Mode Select Switch Circuit Open
B1440	Wiper Mode Select Switch Circuit Short To Battery
B1441	Wiper Mode Select Switch Circuit Short To Ground
B1442	Door Handle Switch Circuit Failure
B1443	Door Handle Switch Circuit Open
B1444	Door Handle Switch Circuit Short To Battery
B1445	Door Handle Switch Circuit Short To Ground
B1446	Wiper Park Sense Circuit Failure
B1447	Wiper Park Sense Circuit Open
B1448	Wiper Park Sense Circuit Short To Battery
B1449	Wiper Park Sense Circuit Short To Ground
B1450	Wiper Wash/Delay Switch Circuit Failure
B1451	Wiper Wash/Delay Switch Circuit Open
B1452	Wiper Wash/Delay Switch Circuit Short To Battery
B1453	Wiper Wash/Delay Switch Circuit Short To Ground
B1454	Wiper Washer Fluid Lamp Circuit Failure
B1455	Wiper Washer Fluid Lamp Circuit Open
B1456	Wiper Washer Fluid Lamp Circuit Short To Battery
B1457	Wiper Washer Fluid Lamp Circuit Short To Ground
B1458	Wiper Washer Pump Motor Relay Circuit Failure
B1459	Wiper Washer Pump Motor Relay Coil Circuit Open
B1460	Wiper Washer Pump Motor Relay Coil Circuit Short To Battery
B1461	Wiper Washer Pump Motor Relay Coil Circuit Short To Ground
B1462	Seat Belt Switch Circuit Failure
B1463	Seat Belt Switch Circuit Open
B1464	Seat Belt Switch Circuit Short To Battery
B1465	Wiper Brake/Run Relay Circuit Open
B1466	Wiper Hi/Low Speed Not Switching
B1467	Wiper Hi/Low Speed Circuit Motor Short To Battery
B1468	Chime Input Request Circuit Failure
B1469	Chime Input Request Circuit Open
B1470	Lamp Headlamp Input Circuit Failure
B1471	Lamp Headlamp Input Circuit Open
B1472	Lamp Headlamp Input Circuit Short To Ground
B1473	Wiper Low Speed Circuit Motor Failure
B1474	Battery Saver Power Relay Circuit Short To Battery

B1475	Accessory Delay Relay Contact Short To Battery
B1476	Wiper High Speed Circuit Motor Failure
B1477	Wiper Hi/Low Circuit Motor Short To Ground
B1478	Power Window One Touch Up/Down Activated Simultaneously
B1479	Wiper Washer Fluid Level Sensor Circuit Failure
B1480	Wiper Washer Fluid Level Sensor Circuit Open
B1481	Wiper Washer Fluid Level Sensor Circuit Short To Battery
B1482	Wiper Washer Fluid Level Sensor Circuit Short To Ground
B1483	Brake Pedal Input Circuit Failure
B1484	Brake Pedal Input Open Circuit
B1485	Brake Pedal Input Circuit Battery Short
B1486	Brake Pedal Input Circuit Ground Short
B1487	Door Handle Right Front Circuit Failure
B1488	Door Handle Right Front Circuit Open
B1489	Door Handle Right Front Short To Battery
B1490	Door Handle Right Front Short To Ground
B1491	Ignition Cylinder Sensor Circuit Failure
B1492	Ignition Cylinder Sensor Open Circuit
B1493	Ignition Cylinder Sensor Battery Short
B1494	Ignition Cylinder Sensor Ground Short
B1495	Decklid Punch-Out Sensor Circuit Failure
B1496	Decklid Punch-Out Sensor Open Circuit
B1497	Decklid Punch-Out Sensor Battery Short
B1498	Decklid Punch-Out Sensor Ground Short
B1499	Lamp Turn Signal Left Circuit Failure
B1500	Lamp Turn Signal Left Circuit Open
B1501	Lamp Turn Signal Left Circuit Short To Battery
B1502	Lamp Turn Signal Left Circuit Short To Ground
B1503	Lamp Turn Signal Right Circuit Failure
B1504	Lamp Turn Signal Right Circuit Open
B1505	Lamp Turn Signal Right Circuit Short To Battery
B1506	Lamp Turn Signal Right Circuit Short To Ground
B1507	Flash To Pass Switch Circuit Failure
B1508	Flash To Pass Switch Circuit Open
B1509	Flash To Pass Switch Circuit Short To Battery
B1510	Flash To Pass Switch Circuit Short To Ground
B1511	Driver Door Handle Circuit Failure
B1512	Driver Door Handle Circuit Open
B1513	Driver Door Handle Circuit Short To Battery
B1514	Driver Door Handle Circuit Short To Ground

B1515	Seat Driver Occupied Switch Circuit Failure
B1516	Seat Driver Occupied Switch Circuit Open
B1517	Seat Driver Occupied Switch Circuit Short To Battery
B1518	Seat Driver Occupied Switch Circuit Short To Ground
B1519	Hood Switch Circuit Failure
B1520	Hood Switch Circuit Open
B1521	Hood Switch Circuit Short To Battery
B1522	Hood Switch Circuit Short To Ground
B1523	Keyless Entry Circuit Failure
B1524	Keyless Entry Circuit Open
B1525	Keyless Entry Circuit Short To Battery
B1526	Keyless Entry Circuit Short To Ground
B1527	Memory Set Switch Circuit Failure
B1528	Memory Set Switch Circuit Open
B1529	Memory Set Switch Circuit Short To Battery
B1530	Memory Set Switch Circuit Short To Ground
B1531	Memory 1 Switch Circuit Failure
B1532	Memory 1 Switch Circuit Open
B1533	Memory 1 Switch Circuit Short To Battery
B1534	Memory 1 Switch Circuit Short To Ground
B1535	Memory 2 Switch Circuit Failure
B1536	Memory 2 Switch Circuit Open
B1537	Memory 2 Switch Circuit Short To Battery
B1538	Memory 2 Switch Circuit Short To Ground
B1539	Mirror Driver Switch Assembly Circuit Failure
B1540	Mirror Driver Switch Assembly Circuit Open
B1541	Mirror Driver Switch Assembly Circuit Short To Battery
B1542	Mirror Driver Switch Assembly Circuit Short To Ground
B1543	Seat Direction Switch Assembly Circuit Failure
B1544	Seat Direction Switch Assembly Circuit Open
B1545	Seat Direction Switch Assembly Circuit Short To Battery
B1546	Seat Direction Switch Assembly Circuit Short To Ground
B1547	Power Window Master Circuit Failure
B1548	Power Window Master Circuit Open
B1549	Power Window Master Circuit Short To Battery
B1550	Power Window Master Circuit Short To Ground
B1551	Decklid Release Circuit Failure
B1552	Decklid Release Circuit Open
B1553	Decklid Release Circuit Short To Battery
B1554	Decklid Release Circuit Short To Ground

B1555	Ignition Run/Start Circuit Failure
B1556	Ignition Run/Start Circuit Open
B1557	Ignition Run/Start Circuit Short To Battery
B1558	Ignition Run/Start Circuit Short To Ground
B1559	Door Lock Cylinder Circuit Failure
B1560	Door Lock Cylinder Circuit Open
B1561	Door Lock Cylinder Circuit Short To Battery
B1562	Door Lock Cylinder Circuit Short To Ground
B1563	Door Ajar Circuit Failure
B1564	Door Ajar Circuit Open
B1565	Door Ajar Circuit Short To Battery
B1566	Door Ajar Circuit Short To Ground
B1567	Lamp Headlamp High-Beam Circuit Failure
B1568	Lamp Headlamp High-Beam Circuit Open
B1569	Lamp Headlamp High-Beam Circuit Short To Battery
B1570	Lamp Headlamp High-Beam Circuit Short To Ground
B1571	Door Ajar LR Circuit Failure
B1572	Door Ajar LR Circuit Open
B1573	Door Ajar LR Circuit Short To Battery
B1574	Door Ajar LR Circuit Short To Ground
B1575	Lamp Park Input Circuit Failure
B1576	Lamp Park Input Circuit Open
B1577	Lamp Park Input Circuit Short To Battery
B1578	Lamp Park Input Circuit Short To Ground
B1579	Dim Panel Increase Input Circuit Failure
B1580	Dim Panel Increase Input Circuit Open
B1581	Dim Panel Increase Input Circuit Short To Battery
B1582	Dim Panel Increase Input Circuit Short To Ground
B1583	Dim Panel Decrease Input Circuit Failure
B1584	Dim Panel Decrease Input Circuit Open
B1585	Dim Panel Decrease Input Circuit Short To Battery
B1586	Dim Panel Decrease Input Circuit Short To Ground
B1587	Autolamp Delay Increase Circuit Failure
B1588	Autolamp Delay Increase Circuit Open
B1589	Autolamp Delay Increase Circuit Short To Battery
B1590	Autolamp Delay Increase Circuit Short To Ground
B1591	Autolamp Delay Decrease Circuit Failure
B1592	Autolamp Delay Decrease Circuit Open
B1593	Autolamp Delay Decrease Circuit Short To Battery
B1594	Autolamp Delay Decrease Circuit Short To Ground

B1595	Ignition Switch Illegal Input Code
B1596	Service Continuous Codes
B1597	Driver's Seat Seatback Autoglide Forward Switch Circuit Short to Ground
B1598	Driver's Seat Seatback Autoglide Rearward Switch Circuit Short to Ground
B1599	Passenger's Seatback Autoglide Forward Switch Circuit Short to Ground
B1600	PATS Ignition Key Transponder Signal Is Not Received
B1601	PATS Received Incorrect Key-Code From Ignition Key Transponder
B1602	PATS Received Invalid Format Of Key-Code From Ignition Key Transponder
B1603	Lamp Anti-Theft Indicator Circuit Failure
B1604	Lamp Anti-Theft Indicator Circuit Open
B1605	Lamp Anti-Theft Indicator Circuit Short To Battery
B1606	Lamp Anti-Theft Indicator Circuit Short To Ground
B1607	Illuminated Entry Input Circuit Failure
B1608	Illuminated Entry Input Open Circuit
B1609	Illuminated Entry Input Short Circuit To Battery
B1610	Illuminated Entry Input Short Circuit To Ground
B1611	Wiper Rear Mode Select Switch Circuit Failure
B1612	Wiper Rear Mode Select Switch Circuit Open
B1613	Wiper Rear Mode Select Switch Circuit Short To Battery
B1614	Wiper Rear Mode Select Switch Circuit Short To Ground
B1615	Wiper Rear Disable Switch Circuit Failure
B1616	Wiper Rear Disable Switch Circuit Open
B1617	Wiper Rear Disable Switch Circuit Short To Battery
B1618	Wiper Rear Disable Switch Circuit Short To Ground
B1619	Wiper Rear Low Limit Input Circuit Failure
B1620	Wiper Rear Low Limit Input Circuit Open
B1621	Wiper Rear Low Limit Input Circuit Short To Battery
B1622	Wiper Rear Low Limit Input Circuit Short To Ground
B1623	Lamp Keypad Output Circuit Failure
B1624	Lamp Keypad Output Open Circuit
B1625	Lamp Keypad Output Short Circuit To Battery
B1626	Lamp Keypad Output Short Circuit To Ground
B1627	PRNDL Reverse Input Circuit Failure
B1628	PRNDL Reverse Input Open Circuit
B1629	PRNDL Reverse Input Short To Battery
B1630	PRNDL Reverse Input Short Circuit To Ground
B1631	Mirror Driver Left Circuit Failure
B1632	Mirror Driver Left Circuit Open
B1633	Mirror Driver Left Circuit Short To Battery

B1634	Mirror Driver Left Circuit Short To Ground
B1635	Mirror Driver Right Circuit Failure
B1636	Mirror Driver Right Circuit Open
B1637	Mirror Driver Right Circuit Short To Battery
B1638	Mirror Driver Right Short To Ground
B1639	Mirror Passenger Left Circuit Failure
B1640	Mirror Passenger Left Circuit Open
B1641	Mirror Passenger Left Circuit Short To Battery
B1642	Mirror Passenger Left Circuit Short To Ground
B1643	Mirror Passenger Right Circuit Failure
B1644	Mirror Passenger Right Circuit Open
B1645	Mirror Passenger Right Circuit Short To Battery
B1646	Mirror Passenger Right Circuit Short To Ground
B1647	Seat Driver Recline Forward Circuit Failure
B1648	Seat Driver Recline Forward Circuit Open
B1649	Seat Driver Recline Forward Circuit Short To Battery
B1650	Seat Driver Recline Forward Circuit Short To Ground
B1651	Seat Driver Recline Backward Circuit Failure
B1652	Seat Driver Recline Backward Circuit Open
B1653	Seat Driver Recline Backward Circuit Short To Battery
B1654	Seat Driver Recline Backward Circuit Short To Ground
B1655	Seat Driver Rear Up Circuit Failure
B1656	Seat Driver Rear Up Circuit Open
B1657	Seat Driver Rear Up Circuit Short To Battery
B1658	Seat Driver Rear Up Circuit Short To Ground
B1659	Seat Driver Front Up Circuit Failure
B1660	Seat Driver Front Up Circuit Open
B1661	Seat Driver Front Up Circuit Short To Battery
B1662	Seat Driver Front Up Circuit Short To Ground
B1663	Seat Driver Front Up/Down Motor Stalled
B1664	Seat Driver Rear Up/Down Motor Stalled
B1665	Seat Driver Forward/Backward Motor Stalled
B1666	Seat Driver Recline Motor Stalled
B1667	Mirror Driver Up/Down Motor Stalled
B1668	Mirror Driver Right/Left Motor Stalled
B1669	Mirror Passenger Up/Down Motor Stalled
B1670	Mirror Passenger Right/Left Motor Stalled
B1671	Battery Module Voltage Out Of Range
B1672	Seat Driver Occupied Input Circuit Failure
B1673	Seat Driver Occupied Input Circuit Open

B1674	Seat Driver Occupied Input Circuit Short To Battery
B1675	Seat Driver Occupied Input Circuit Short To Ground
B1676	Battery Pack Voltage Out Of Range
B1677	Alarm Panic Input Circuit Failure
B1678	Alarm Panic Input Circuit Open
B1679	Alarm Panic Input Circuit Short To Battery
B1680	Alarm Panic Input Circuit Short To Ground
B1681	PATS Transceiver Module Signal Is Not Received
B1682	PATS Is Disabled (Check Link Between PATS And Transponder)
B1683	Mirror Driver/Passenger Switch Circuit Failure
B1684	Mirror Driver/Passenger Switch Circuit Open
B1685	Lamp Dome Input Circuit Failure
B1686	Lamp Dome Input Circuit Open
B1687	Lamp Dome Input Circuit Short To Battery
B1688	Lamp Dome Input Circuit Short To Ground
B1689	Autolamp Delay Circuit Failure
B1690	Autolamp Delay Circuit Open
B1691	Autolamp Delay Circuit Short To Battery
B1692	Autolamp Delay Circuit Short To Ground
B1693	Autolamp On Circuit Failure
B1694	Autolamp On Circuit Open
B1695	Autolamp On Circuit Short To Battery
B1696	Autolamp On Circuit Short To Ground
B1697	Mirror Driver/Passenger Switch Circuit Short To Battery
B1698	Mirror Driver/Passenger Switch Circuit Short To Ground
B1699	Passenger's Seat Occupied Switch Circuit Short to Ground
B1700	Passenger's Seatbelt Tension Reducer Circuit Short to Ground
B1701	Seat Driver Recline Forward Switch Circuit Failure
B1702	Seat Driver Recline Forward Switch Circuit Open
B1703	Seat Driver Recline Forward Switch Circuit Short To Battery
B1704	Seat Driver Recline Forward Switch Circuit Short To Ground
B1705	Seat Driver Recline Rearward Switch Circuit Failure
B1706	Seat Driver Recline Rearward Switch Circuit Open
B1707	Seat Driver Recline Rearward Switch Circuit Short To Battery
B1708	Seat Driver Recline Rearward Switch Circuit Short To Ground
B1709	Seat Driver Front Up Switch Circuit Failure
B1710	Seat Driver Front Up Switch Circuit Open
B1711	Seat Driver Front Up Switch Circuit Short To Battery
B1712	Seat Driver Front Up Switch Circuit Short To Ground
B1713	Seat Driver Front Down Switch Circuit Failure

B1714	Seat Driver Front Down Switch Circuit Open
B1715	Seat Driver Front Down Switch Circuit Short To Battery
B1716	Seat Driver Front Down Switch Circuit Short To Ground
B1717	Seat Driver Forward Switch Circuit Failure
B1718	Seat Driver Forward Switch Circuit Open
B1719	Seat Driver Forward Switch Circuit Short To Battery
B1720	Seat Driver Forward Switch Circuit Short To Ground
B1721	Seat Driver Rearward Switch Circuit Failure
B1722	Seat Driver Rearward Switch Circuit Open
B1723	Seat Driver Rearward Switch Circuit Short To Battery
B1724	Seat Driver Rearward Switch Circuit Short To Ground
B1725	Seat Driver Rear Up Switch Circuit Failure
B1726	Seat Driver Rear Up Switch Circuit Open
B1727	Seat Driver Rear Up Switch Circuit Short To Battery
B1728	Seat Driver Rear Up Switch Circuit Short To Ground
B1729	Seat Driver Rear Down Switch Circuit Failure
B1730	Seat Driver Rear Down Switch Circuit Open
B1731	Seat Driver Rear Down Switch Circuit Short To Battery
B1732	Seat Driver Rear Down Switch Circuit Short To Ground
B1733	Mirror Driver Vertical Switch Circuit Failure
B1734	Mirror Driver Vertical Switch Circuit Open
B1735	Mirror Driver Vertical Switch Circuit Short To Battery
B1736	Mirror Driver Vertical Switch Circuit Short To Ground
B1737	Mirror Driver Horizontal Switch Circuit Failure
B1738	Mirror Driver Horizontal Switch Circuit Open
B1739	Mirror Driver Horizontal Switch Circuit Short To Battery
B1740	Mirror Driver Horizontal Switch Circuit Short To Ground
B1741	Mirror Passenger Vertical Switch Circuit Failure
B1742	Mirror Passenger Vertical Switch Circuit Open
B1743	Mirror Passenger Vertical Switch Circuit Short To Battery
B1744	Mirror Passenger Vertical Switch Circuit Short To Ground
B1745	Mirror Passenger Horizontal Switch Circuit Failure
B1746	Mirror Passenger Horizontal Switch Circuit Open
B1747	Mirror Passenger Horizontal Switch Circuit Short To Battery
B1748	Mirror Passenger Horizontal Switch Circuit Short To Ground
B1749	Park/Neutral Switch Circuit Failure
B1750	Park/Neutral Switch Circuit Open
B1751	Park/Neutral Switch Circuit Short To Battery
B1752	Park/Neutral Switch Circuit Short To Ground
B1753	Hazard Flash Output Circuit Failure

B1754	Hazard Flash Output Circuit Open
B1755	Hazard Flash Output Circuit Short Battery
B1756	Hazard Flash Output Circuit Short To Ground
B1757	Seat Driver Rear Down Circuit Failure
B1758	Seat Driver Rear Down Circuit Open
B1759	Seat Driver Rear Down Circuit Short To Battery
B1760	Seat Driver Rear Down Circuit Short To Ground
B1761	Seat Driver Front Down Circuit Failure
B1762	Seat Driver Front Down Circuit Open
B1763	Seat Driver Front Down Circuit Short To Battery
B1764	Seat Driver Front Down Circuit Short To Ground
B1765	Seat Driver Forward Circuit Failure
B1766	Seat Driver Forward Circuit Open
B1767	Seat Driver Forward Circuit Short To Battery
B1768	Seat Driver Forward Circuit Short To Ground
B1769	Seat Driver Backward Circuit Failure
B1770	Seat Driver Backward Circuit Open
B1771	Seat Driver Backward Circuit Short To Battery
B1772	Seat Driver Backward Circuit Short To Ground
B1773	Mirror Driver Up Circuit Failure
B1774	Mirror Driver Up Circuit Open
B1775	Mirror Driver Up Circuit Short To Battery
B1776	Mirror Driver Up Circuit Short To Ground
B1777	Driver's Seatbelt Tension Reducer Circuit Short to Ground
B1778	Mirror Driver Down Circuit Failure
B1779	Mirror Driver Down Circuit Open
B1780	Mirror Driver Down Circuit Short To Battery
B1781	Mirror Driver Down Short To Ground
B1782	Mirror Passenger Up Circuit Failure
B1783	Mirror Passenger Up Circuit Open
B1784	Mirror Passenger Up Circuit Short To Battery
B1785	Mirror Passenger Up Circuit Short To Ground
B1786	Mirror Passenger Down Circuit Failure
B1787	Mirror Passenger Down Circuit Open
B1788	Mirror Passenger Down Circuit Short To Battery
B1789	Mirror Passenger Down Circuit Short To Ground
B1790	Autolamp Sensor Input Circuit Failure
B1791	Autolamp Sensor Input Circuit Open
B1792	Autolamp Sensor Input Circuit Short To Battery
B1793	Autolamp Sensor Input Circuit Short To Ground

B1794	Lamp Headlamp Low-Beam Circuit Failure
B1795	Lamp Headlamp Low-Beam Circuit Open
B1796	Lamp Headlamp Low-Beam Circuit Short To Battery
B1797	Lamp Headlamp Low-Beam Circuit Short To Ground
B1798	Lamp Turn Signal Front Output Circuit Failure
B1799	Lamp Turn Signal Front Output Circuit Open
B1800	Lamp Turn Signal Front Output Circuit Short To Battery
B1801	Lamp Turn Signal Front Output Circuit Short To Ground
B1802	Lamp Turn Signal Rear Output Circuit Failure
B1803	Lamp Turn Signal Rear Output Circuit Open
B1804	Lamp Turn Signal Rear Output Circuit Short To Battery
B1805	Lamp Turn Signal Rear Output Circuit Short To Ground
B1806	Lamp Tail Output Circuit Failure
B1807	Lamp Tail Output Circuit Open
B1808	Lamp Tail Output Circuit Short To Battery
B1809	Lamp Tail Output Circuit Short To Ground
B1810	Lamp Backup Switch Input Circuit Failure
B1811	Lamp Backup Switch Input Circuit Open
B1812	Lamp Backup Switch Input Circuit Short To Battery
B1813	Lamp Backup Switch Input Circuit Short To Ground
B1814	Wiper Rear Motor Down Relay Coil Circuit Failure
B1815	Wiper Rear Motor Down Relay Coil Circuit Open
B1816	Wiper Rear Motor Down Relay Coil Circuit Short To Battery
B1817	Wiper Rear Motor Down Relay Coil Circuit Short To Ground
B1818	Wiper Rear Motor Up Relay Coil Circuit Failure
B1819	Wiper Rear Motor Up Relay Coil Circuit Open
B1820	Wiper Rear Motor Up Relay Coil Circuit Short To Battery
B1821	Wiper Rear Motor Up Relay Coil Circuit Short To Ground
B1822	Wiper Rear Park Sense Input Circuit Failure
B1823	Wiper Rear Park Sense Input Circuit Open
B1824	Wiper Rear Park Sense Input Circuit Short To Battery
B1825	Wiper Rear Park Sense Input Circuit Short To Ground
B1826	Wiper Rear High Limit Input Circuit Failure
B1827	Wiper Rear High Limit Input Circuit Open
B1828	Wiper Rear High Limit Input Circuit Short To Battery
B1829	Wiper Rear High Limit Input Circuit Short To Ground
B1830	Door Unlock Disarm Switch Circuit Failure
B1831	Door Unlock Disarm Switch Circuit Open
B1832	Door Unlock Disarm Switch Circuit Short To Battery
B1833	Door Unlock Disarm Switch Circuit Short To Ground

B1834	Door Unlock Disarm Output Circuit Failure
B1835	Door Unlock Disarm Output Circuit Open
B1836	Door Unlock Disarm Output Circuit Short To Battery
B1837	Door Unlock Disarm Output Circuit Short To Ground
B1838	Battery Saver Power Relay Circuit Failure
B1839	Wiper Rear Motor Circuit Failure
B1840	Wiper Front Power Circuit Failure
B1841	Wiper Front Power Circuit Open
B1842	Wiper Front Power Circuit Short To Battery
B1843	Wiper Front Power Circuit Short To Ground
B1844	Phone Handset Circuit Failure
B1845	Ignition Tamper Circuit Failure
B1846	Ignition Tamper Circuit Open
B1847	Ignition Tamper Circuit Short To Battery
B1848	Ignition Tamper Circuit Short To Ground
B1849	Climate Control Temperature Differential Circuit Failure
B1850	Climate Control Temperature Differential Circuit Open
B1851	Climate Control Temperature Differential Circuit Short To Battery
B1852	Climate Control Temperature Differential Circuit Short To Ground
B1853	Climate Control Air Temperature Internal Sensor Motor Circuit Failure
B1854	Climate Control Air Temperature Internal Sensor Motor Circuit Open
B1855	Climate Control Air Temperature Internal Sensor Motor Circuit Short To Battery
B1856	Climate Control Air Temperature Internal Sensor Motor Circuit Short To Ground
B1857	Climate Control On/Off Switch Circuit Failure
B1858	Climate Control A/C Pressure Switch Circuit Failure
B1859	Climate Control A/C Pressure Switch Circuit Open
B1860	Climate Control A/C Pressure Switch Circuit Short To Battery
B1861	Climate Control A/C Pressure Switch Circuit Short To Ground
B1862	Climate Control A/C Lock Sensor Failure
B1863	Ground ECU Circuit Open
B1864	Battery Power Supply ECU Circuit Failure
B1865	Battery Power Supply ECU Circuit Open
B1866	Battery Power Supply ECU Circuit Short To Battery
B1867	Battery Power Supply ECU Circuit Short To Ground
B1868	Lamp Air Bag Warning Indicator Circuit Failure
B1869	Lamp Air Bag Warning Indicator Circuit Open
B1870	Lamp Air Bag Warning Indicator Circuit Short To Battery
B1871	Passenger Air Bag Disable Module Fault

B1872	Turn Signal / Hazard Power Feed Circuit Short To Battery
B1873	Turn Signal / Hazard Power Feed Circuit Short To Ground
B1874	Cellular Phone Handset Not Present
B1875	Turn Signal / Hazard Switch Signal Circuit Failure
B1876	Seatbelt Driver Pretensioner Circuit Failure
B1877	Seatbelt Driver Pretensioner Circuit Open
B1878	Seatbelt Driver Pretensioner Circuit Short to Battery
B1879	Seatbelt Driver Pretensioner Circuit Short to Ground
B1880	Seatbelt Passenger Pretensioner Circuit Failure
B1881	Seatbelt Passenger Pretensioner Circuit Open
B1882	Seatbelt Passenger Pretensioner Circuit Short to Battery
B1883	Seatbelt Passenger Pretensioner Circuit Short to Ground
B1884	PAD Warning Lamp Inoperative
B1885	Seatbelt Driver Pretensioner Circuit Resistance Low on Squib
B1886	Seatbelt Passenger Pretensioner Circuit Resistance Low on Squib
B1887	Air Bag Driver Circuit Resistance Low or Shorted Together
B1888	Air Bag Passenger Circuit Resistance Low or Shorted Together
B1889	Passenger Airbag Disable Module Sensor Obstructed
B1890	PAD Warning Lamp Circuit Short to Battery
B1891	Air Bag Tone Warning Indicator Circuit Short to Battery
B1892	Air Bag Tone Warning Indicator Circuit Failure
B1893	GPS Antenna Open Circuit
B1894	Wiper Rear Motor Speed Sense Circuit Failure
B1895	Driver's / Passenger's Door Ajar Output Circuit Failure
B1896	Driver's / Passenger's Door Ajar Output Circuit Short to Battery
B1897	Horn Switch Circuit Failure
B1898	Chime Input #2 Circuit Short to Ground
B1899	Microphone Input Signal Circuit Open
B1900	Driver Side Airbag Fault
B1901	Air Bag Crash Sensor #1 Feed/Return Circuit Short To Ground
B1902	Air Bag Crash Sensor #1 Ground Circuit Failure
B1903	Air Bag Crash Sensor #1 Ground Circuit Short To Battery
B1904	Air Bag Crash Sensor #2 Feed/Return Circuit Failure
B1905	Air Bag Crash Sensor #2 Feed/Return Circuit Short To Battery
B1906	Air Bag Crash Sensor #2 Feed/Return Circuit Short To Ground
B1907	Air Bag Crash Sensor #2 Ground Circuit Failure
B1908	Air Bag Crash Sensor #2 Ground Circuit Short To Battery
B1909	Air Bag Crash Sensor #2 Ground Circuit Short To Ground
B1910	Air Bag Diagnostic Monitor Ground Circuit Failure
B1911	Air Bag Diagnostic Monitor Ground Circuit Short To Battery

B1912	Air Bag Diagnostic Monitor Ground Circuit Short To Ground
B1913	Air Bag Driver/Passenger Circuit Short To Ground
B1914	Air Bag Crash Sensors #1 / #2 Circuit Short To Ground
B1915	Air Bag Driver Circuit Failure
B1916	Air Bag Driver Circuit Short To Battery
B1917	Air Bag Memory Clear Circuit Failure
B1918	Air Bag Memory Clear Circuit Open
B1919	Air Bag Memory Clear Circuit Short To Battery
B1920	Air Bag Passenger Circuit Failure
B1921	Air Bag Diagnostic Monitor Ground Circuit Open
B1922	Air Bag Safing Sensor Output Circuit Short To Battery
B1923	Air Bag Memory Clear Circuit Short To Ground
B1924	Air Bag Internal Diagnostic Monitor Fault or System Disarm Fault
B1925	Air Bag Passenger Circuit Short To Battery
B1926	Air Bag Passenger Pressure Switch Circuit Failure
B1927	Passenger Side Airbag Fault
B1928	Air Bag Safing Sensor Output Circuit Failure
B1929	Air Bag Safing Sensor Output Circuit Open
B1930	Air Bag Safing Sensor Output Circuit Short To Ground
B1931	Air Bag Crash Sensor #1 Feed/Return Circuit Failure
B1932	Air Bag Driver Circuit Open
B1933	Air Bag Passenger Circuit Open
B1934	Air Bag Driver Inflator Circuit Resistance Low on Squib
B1935	Air Bag Passenger Inflator Circuit Resistance Low on Squib
B1936	Air Bag Driver Circuit Short To Ground
B1937	Air Bag Passenger Pressure Switch Circuit Open
B1938	Air Bag Passenger Circuit Short To Ground
B1939	Air Bag Passenger Pressure Switch Circuit Short To Ground
B1941	Air Bag Crash Sensor #1 Feed/Return Circuit Open
B1942	Air Bag Crash Sensor #2 Feed/Return Circuit Open
B1943	Air Bag Crash Sensor #1 Ground Circuit Short To Ground
B1944	Air Bag Crash Sensor #1 Ground Circuit Open
B1945	Air Bag Crash Sensor #2 Ground Circuit Open
B1946	Climate Control A/C Post Evaporator Sensor Circuit Failure
B1947	Climate Control A/C Post Evaporator Sensor Circuit Short To Ground
B1948	Climate Control Water Temperature Sensor Circuit Failure
B1949	Climate Control Water Temperature Sensor Circuit Short To Ground
B1950	Seat Rear Up/Down Potentiometer Feedback Circuit Failure
B1951	Seat Rear Up/Down Potentiometer Feedback Circuit Open
B1952	Seat Rear Up/Down Potentiometer Feedback Circuit Short To Battery

B1953	Seat Rear Up/Down Potentiometer Feedback Circuit Short To Ground
B1954	Seat Front Up/Down Potentiometer Feedback Circuit Failure
B1955	Seat Front Up/Down Potentiometer Feedback Circuit Open
B1956	Seat Front Up/Down Potentiometer Feedback Circuit Short To Battery
B1957	Seat Front Up/Down Potentiometer Feedback Circuit Short To Ground
B1958	Seat Recline Forward/Backward Potentiometer Feedback Circuit Failure
B1959	Seat Recline Forward/Backward Potentiometer Feedback Circuit Open
B1960	Seat Recline Forward/Backward Potentiometer Feedback Circuit Short To Battery
B1961	Seat Recline Forward/Backward Potentiometer Feedback Circuit Short To Ground
B1962	Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Failure
B1963	Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Open
B1964	Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Short To Battery
B1965	Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Short To Ground
B1966	A/C Post Heater Sensor Circuit Failure
B1967	A/C Post Heater Sensor Circuit Short To Ground
B1968	A/C Water Pump Detection Circuit Failure
B1969	A/C Clutch Magnetic Control Circuit Failure
B1970	Passenger Seatback Forward Switch Circuit Short to Ground
B1971	Passenger Seatback Rearward Switch Circuit Short to Ground
B1972	Passenger Rear Seat Up Switch Circuit Short to Battery
B1973	Passenger Rear Seat Down Switch Circuit Short to Battery
B1974	Passenger's Seat Recline Forward Switch Circuit Short to Battery
B1975	Passenger's Seat Recline Back Switch Circuit Short to Battery
B1976	Passenger's Seat Forward Switch Circuit Short to Battery
B1977	Passenger's Front Seat Up Switch Circuit Short to Battery
B1978	Passenger's Front Seat Down Switch Circuit Short to Battery
B1979	Passenger Seat Rearward Switch Circuit Short to Battery
B1980	Bulb – Outage Condition Detected
B1981	Memory Off Switch Circuit Short to Battery
B1982	Driver's Door Unlock Relay Circuit Failure
B1983	Driver's Door Unlock Relay Circuit Short to Battery
B1984	Seat Switch Lumbar Inflate Circuit Failure
B1985	Seat Switch Lumbar Deflate Circuit Failure
B1986	Driver's Seat Seatback Autoglide Rearward Switch Circuit Failure
B1987	Pedal Forward / Rearward Motor Stalled
B1988	Pedal Position Forward Switch Circuit Short to Battery
B1989	Pedal Position Rearward Switch Circuit Short to Battery

B1990	Pedal Forward / Rearward Potentiometer Feedback Circuit Failure
B1991	Pedal Forward / Rearward Potentiometer Feedback Circuit Short to Battery
B1992	Driver Side, Side mount Airbag Circuit Short to Vbatt
B1993	Driver Side, Side mount Airbag Circuit Short to Ground
B1994	Driver Side, Side mount Airbag Circuit Open
B1995	Driver Side, Side mount Airbag Low resistance on Squib
B1996	Passenger Side, Side mount Airbag Circuit Short to Vbatt
B1997	Passenger Side, Side mount Airbag Circuit Short to Ground
B1998	Passenger Side, Side mount Airbag Circuit Open
B1999	Passenger Side, Side mount Airbag Low resistance on Squib

B2000 – B2999 (Manufacturer defined)

B2000	ISO/SAE Reserved
B2097	Compass Module Failure (Ford)
B2100	Door Driver Key Cylinder Switch Failure
B2101	Head Rest Switch Circuit Failure
B2102	Antenna Circuit Short to Ground
B2103	Antenna Not Connected
B2104	Door Passenger Key Cylinder Switch Failure
B2105	Throttle Position Input Out of Range Low
B2106	Throttle Position Input Out of Range High
B2107	Front Wiper Motor Relay Circuit Short to Vbatt
B2108	Trunk Key Cylinder Switch Failure
B2109	Heated Wind Shield Relay Short to Vbatt (changed from Failure 2/6/97)
B2110	Front Wiper Motor Relay Circuit Open (changed from Failure 2/6/97)
B2111	All Door Lock Input Short to Ground
B2112	Door Driver Set Switch Stuck Failure
B2113	Heated Windshield Input Short to Ground
B2114	Front Washer Input Short to Ground
B2115	Rear Washer Input Short to Ground
B2116	Door Driver Reset Switch Stuck Failure
B2117	Driver Side, Side mount Airbag Low capacitance on Squib
B2118	Passenger Side, Side mount Airbag Low capacitance on Squib
B2119	Compressor Failure
B2120	Door Passenger Set Switch Stuck Failure
B2122	Driver Side Satellite Communication Circuit Short to Ground
B2123	Passenger Side Satellite Communication Circuit Short to Ground
B2124	Door Passenger Reset Switch Stuck Failure
B2128	Central Lock Motor Failure
B2129	Central Lock Feedback Failure

B2130	Double Lock Timeout Failure
B2131	Double Lock Feedback Failure
B2132	Dimmer switch Circuit Short to Gnd
B2133	Brake Motor Warning lamp Circuit Failure
B2134	Brake Motor Warning lamp Circuit Short to Vbatt
B2135	Park Brake Applied Warning Lamp Circuit Failure
B2136	Park Brake Applied Warning Lamp Circuit Short To Battery
B2139	Data Mismatch (receive data does not match what was expected)
B2141	NVM Configuration Failure
B2142	NVM TIC Failure
B2143	NVM Memory Failure
B2144	NVM Alarm Data Failure
B2145	NVM RF HR Failure
B2146	Seat Recline Motor Position Out of Range
B2148	PWM Input Circuit Failure
B2149	Seat Front Vertical Motor Position Out of Range
B2150	Power Supply #1 Circuit Short to Ground
B2151	Power Supply #2 Circuit Short to Ground
B2152	Seat Rear Vertical Motor Position Out of Range
B2153	Rear Echo Sensor Circuit Failure
B2154	Front Echo Sensor Circuit Failure
B2155	Seat Horizontal Motor Position Out of Range
B2156	Rear Doppler Sensor Circuit Failure
B2157	Front Doppler Sensor Circuit Failure
B2158	Seat Recline Motor Memory Position Out of Range
B2159	Memory #1 output Short to Ground
B2160	Memory #1 output Short to VBatt
B2161	Seat Front Vertical Motor Memory Position Out of Range
B2162	Data Mismatch #2 (receive data does not match what was expected)
B2163	Clutch Position Fault
B2164	Seat Rear Vertical Motor Memory Position Out of Range
B2165	Gear shift position Fault
B2166	Gear select position Fault
B2167	Seat Horizontal Motor Memory Position Out of Range
B2168	Unable to confirm Unlock Condition
B2169	Unable to confirm lock Condition
B2170	Steering Column Lock Switch Circuit Failure
B2172	Inertia Switch input Circuit Open
B2174	Window Driver Rear Remote Up Switch Short to Battery
B2175	A/C Request Signal Circuit Short to Ground

B2176	Overdrive switch circuit short to Vbatt
B2177	Interior Scanning Sensor Circuit Failure
B2178	Window Driver Rear Remote Down Switch Short to Battery
B2179	Front Wiper Select Switch "A" Short to Ground
B2180	Front Wiper Select Switch "B" Short to Ground
B2181	Front Wiper Select Switch "C" Short to Ground
B2182	Window Passenger Front Remote Up Switch Short to Battery
B2183	Front Wiper Select Switch "H" Short to Ground
B2184	Front Wiper Select Switch "W" Short to Ground
B2185	Rear Wiper Select Switch "D" Short to Ground
B2186	Window Passenger Front Remote Down Switch Short to Battery
B2187	Rear Wiper Select Switch "B" Short to Ground
B2188	Rear Wiper Select Switch "E" Short to Ground
B2190	Window Passenger Rear Remote Up Switch Short to Battery
B2194	Window Passenger Rear Remote Down Switch Short to Battery
B2195	Driver Window Up / Down Power Circuit Short to Ground
B2196	Passenger Window Up / Down Power Circuit Short to Ground
B2197	TV Module Error
B2198	TrafficMaster Module Error
B2199	VICS Module Error
B2200	No Communication to TV Module (No Fitting of TV)
B2201	No Communication With Traffic MasterModule
B2202	No Communication to VICS Module (No Fitting of VICS)
B2203	CD-ROM Error
B2204	GPS Antenna Connection Open or Short
B2205	GPS Receiver Error
B2206	Gyroscope Error
B2207	ECU ROM Checksum Error
B2208	Communication Link to Display and Switch Module Error
B2209	Interior Lamp Override Switch Open Circuit
B2210	Interior Lamp Override Switch Short to Ground
B2211	Low Coolant Lamp Output Circuit Short to Battery
B2214	Window Passenger Front Up Switch Short to Battery
B2215	Window Passenger Front Down Switch Short to Battery
B2219	Window Driver Front Current Feedback Exceeded
B2220	Window Driver Rear Current Feedback Exceeded
B2221	Window Passenger Front Current Feedback Exceeded
B2222	Window Passenger Rear Current Feedback Exceeded
B2223	Mirror Driver Drive Circuit Failure
B2224	Mirror Passenger Drive Circuit Failure

B2225	Front Crash Sensor Mount Fault
B2226	Front Crash Sensor Internal Fault
B2227	Front Crash Sensor Driver Communications Fault
B2228	Air Bag Driver Circuit Short to Ground – Loop #2
B2229	Air Bag Passenger Circuit Short to Ground – Loop #2
B2230	Air Bag Driver Circuit Short to Battery – Loop #2
B2231	Air Bag Passenger Circuit Short to Battery – Loop #2
B2232	Air Bag Driver Circuit Open – Loop #2
B2233	Air Bag passenger Circuit Open – Loop #2
B2234	Air Bag Driver Inflator Circuit Resistance Low on Squib – Loop #2
B2235	Air Bag Passenger Inflator Circuit
B2236	Weak or Defected Electric Vehicle Battery Module Fault
B2237	Vehicle Signal indicating Park While VSS Present
B2238	Power Cable For Power Sliding Door Broken
B2239	Rear Cargo Door Set Switch Stuck (Short to Ground)
B2240	Rear Cargo Door Reset Switch Stuck (Short to Ground)
B2241	Rear Cargo Door Lock Circuit Short to Ground
B2242	Rear Cargo Door Unlock Circuit Open
B2243	Driver Rear Door Ajar Circuit Open
B2244	Driver Sliding Door Ajar Circuit Short to GND
B2245	Passenger Rear Door Ajar Circuit Open
B2246	Passenger Sliding Door Ajar Circuit Short to GND
B2247	EV Battery Pack Temperature Fault
B2248	Heated Windshield Relay Coil Circuit Failure
B2249	Head Lamp Relay Coil Short to Battery
B2250	All Doors Unlock Relay Circuit Failure
B2251	Parklamp Output Relay Driver Circuit Failure
B2252	Parklamp Output Relay Dirver Short to Battery
B2300	Seat Driver Memory Position Error
B2301	Seat Passenger Memory Position Error
B2302	Seat Headrest Feedback Potentiometer Circuit Failure
B2303	Seat Headrest Feedback Potentiometer Circuit Open
B2304	Seat Headrest Feedback Potentiometer Circuit Short to Battery
B2305	Seat Headrest Feedback Potentiometer Circuit Short to Ground
B2306	Seat Headrest Motor Stalled
B2310	Mirror Driver Memory Position Error
B2311	Mirror Passenger Memory Position Error
B2312	Mirror Passenger Horizontal Feedback Potentiometer Circuit Failure
B2313	Mirror Passenger Horizontal Feedback Potentiometer Circuit Open
B2314	Mirror Passenger Horizontal Feedback Potentiometer Circuit Short to Battery

B2315	Mirror Passenger Horizontal Feedback Potentiometer Circuit Short to Ground
B2316	Mirror Passenger Vertical Feedback Potentiometer Circuit Failure
B2317	Mirror Passenger Vertical Feedback Potentiometer Circuit Open
B2318	Mirror Passenger Vertical Feedback Potentiometer Circuit Short to Battery
B2319	Mirror Passenger Vertical Feedback Potentiometer Circuit Short to Ground
B2320	Mirror Driver Horizontal Feedback Potentiometer Circuit Failure
B2321	Mirror Driver Horizontal Feedback Potentiometer Circuit Open
B2322	Mirror Driver Horizontal Feedback Potentiometer Circuit Short to Battery
B2323	Mirror Driver Horizontal Feedback Potentiometer Circuit Short to Ground
B2324	Mirror Driver Vertical Feedback Potentiometer Circuit Failure
B2325	Mirror Driver Vertical Feedback Potentiometer Circuit Open
B2326	Mirror Driver Vertical Feedback Potentiometer Circuit Short to Battery
B2327	Mirror Driver Vertical Feedback Potentiometer Circuit Short to Ground
B2328	Column Reach Feedback Potentiometer Circuit Failure
B2329	Column Reach Feedback Potentiometer Circuit Open
B2330	Column Reach Feedback Potentiometer Circuit Short to Battery
B2331	Column Reach Feedback Potentiometer Circuit Short to Ground
B2332	Column Tilt Feedback Potentiometer Circuit Failure
B2333	Column Tilt Feedback Potentiometer Circuit Open
B2334	Column Tilt Feedback Potentiometer Circuit Short to Battery
B2335	Column Tilt Feedback Potentiometer Circuit Short to Ground
B2336	Mirror Switch Assembly Circuit Failure
B2337	Mirror Switch Assembly Circuit Open
B2338	Mirror Switch Assembly Circuit Short to Battery
B2339	Mirror Switch Assembly Circuit Short to Ground
B2340	Column Reach Motor Stalled
B2341	Column Tilt Motor Stalled
B2342	Seat Switch Reference Voltage Positive Common Open Circuit
B2343	Seat Switch Reference Voltage Positive Common Supply Low Voltage
B2344	Seat Switch Reference Voltage Positive Common Supply Voltage Fault
B2345	Seat Switch Reference Voltage Negative Common Open Circuit
B2346	Mirror Switch Reference Voltage Positive Common Open Circuit
B2347	Mirror Switch Reference Voltage Positive Common Supply Low Voltage
B2348	Mirror Switch Reference Voltage Positive Common Supply Voltage Fault
B2349	Mirror Switch Reference Voltage Negative Common Open Circuit
B2350	Steering Column Switch Circuit Short to Battery
B2351	Steering Column Switch Circuit Failure
B2352	Driver Memory Power Switch Indicator Circuit Short to Battery
B2353	Driver Mirror Power Driver Circuit Short Ground

B2354	Driver Mirror Horizontal / Vertical Feedback Potentiometer Circuit Open
B2355	Passenger Mirror Horizontal / Vertical Feedback Potentiometer Circuit Open
B2357	Driver Window Down Current Sense Low Circuit Failure
B2362	Remote Open/Close signal Circuit Short to Ground
B2363	Optical Sensor System Failure
B2364	Fuel Filler Door Circuit Open
B2365	B-pillar Power Sliding Door Open/Close Switch Input Ckt Short to Gnd
B2366	IP Power Sliding Door Open/Close switch Ckt Short to Gnd
B2367	Power Sliding Door Override Switch Input Ckt Short to Gnd
B2368	Steering Column Switch Circuit Out of Range
B2369	Chime OUTPUT Request Ckt Short to Ground
B2373	LED #1 Circuit Short to Battery
B2374	Power Sliding Detent (Latch) Circuit Failure
B2380	Heater Coolant Temp sensor circuit Short to GND
B2381	Heater Coolant Temp sensor circuit Open
B2384	Audio Reverse Aid Mute Input Ckt Failure
B2385	Audio Navigation Mute Input Ckt Failure
B2401	Audio Tape Deck Mechanism Fault
B2402	Audio CD/DJ Thermal Shutdown Fault
B2403	Audio CD/DJ Internal Fault
B2404	Audio Steering Wheel Switch Circuit Fault
B2405	Audio Single-Disc CD Player Thermal Shutdown Fault
B2406	Audio Single-Disc CD Player Internal Fault
B2416	Climate Control Recirculation Actuator Out of Limits
B2425	Remote Keyless Entry Out of Synchronization
B2426	Passenger Solar Radiation Sensor Circuit Open
B2427	Passenger Solar Radiation Sensor Circuit Short to Ground
B2428	A/C Post Heater Sensor #2 Circuit Failure
B2429	A/C Post Heater Sensor #2 Circuit Short to Ground
B2431	Transponder Programming Failed
B2432	Drivers Seat Belt Buckle Switch Circuit Open
B2433	Drivers Seat Belt Buckle Switch Circuit Short to Battery
B2434	Drivers Seat Belt Buckle Switch Circuit Short to Ground
B2435	Drivers Seat Belt Buckle Switch Resistance out of Range
B2436	Passengers Seat Belt Buckle Switch Circuit Open
B2437	Passengers Seat Belt Buckle Switch Circuit Short to Battery
B2438	Passengers Seat Belt Buckle Switch Circuit Short to Ground
B2439	Passengers Seat Belt Buckle Switch Resistance out of Range
B2440	Passenger Side, Side crash sensor mount fault
B2441	Driver Side, Side crash sensor mount fault

B2442	Intrusion Sensor Fault
B2443	Powertrain Performance Mode Switch Circuit failure
B2444	Driver Side Crash Sensor Internal Fault
B2445	Passenger Side Crash Sensor Internal Fault
B2446	RESCU/VEMS Input Circuit Open
B2447	RESCU/VEMS Input Circuit Short to Battery
B2448	RESCU/VEMS Input Circuit Short to Ground
B2449	Aux Heater Glow Plug Circuit Short to Ground
B2450	Aux Heater Glow Plug Circuit Open
B2451	Aux Heater Fuel Pump Circuit Short to Ground
B2452	Aux Heater Fuel Pump Circuit Open
B2453	Aux Heater Blower Fan Circuit Short to Ground
B2454	Aux Heater Blower Fan Circuit Open
B2455	Aux Heater Blower Faulted
B2456	Aux Heater Coolant Sensor Circuit Short to Ground
B2457	Aux Heater Coolant Sensor Circuit Open
B2458	Aux Heater Overheat Sensor Circuit Short to Ground
B2459	Aux Heater Overheat Sensor Circuit Open
B2460	Aux Heater Flame Sensor Circuit Short to Ground
B2461	Aux Heater Flame Sensor Circuit Open
B2462	Aux Heater Flame Out Fault
B2463	Aux Heater Overheat Fault
B2464	Aux Heater Start Time Exceeded
B2465	Aux Heater Start Counter Overrun/System Locked (same as below ?)
B2466	Aux Heater Overheat Counter Overrun/System Locked
B2467	Aux Heater Cool Down Time Exceeded (may be con to a453-5)
B2468	Aux Heater Coolant Pump Circuit Short to Ground
B2469	Aux Heater Coolant Pump Circuit Open
B2470	Interior Fan Control Circuit Short to Ground
B2471	Interior Fan Control Circuit Open
B2472	Fog Lamp Switch Failure
B2473	Passenger Door Disarm Switch ckt Short to Ground
B2474	Passenger Door Lock Switch Circuit Shorted to Ground
B2475	Passenger Door Unlock Switch Circuit Shorted to Ground
B2476	RADIO PRESENT SWITCH Ckt Failure
B2477	Module Configuration Failure
B2478	ANTI THEFT INPUT SIGNAL SHORT TO GROUND
B2479	BRAKE PARK SWITCH CIRCUIT SHORT TO GROUND
B2480	LF CORNER LAMP OUTPUT Ckt Short to Battery
B2481	Convertible Top Up/Down switch Fault

B2482	RF CORNER LAMP OUTPUT Ckt Short to Battery
B2483	Enable Signal Open Circuit
B2484	Disable Signal Short to Ground
B2485	LF SIDE REPEATER LAMP OUTPUT Ckt Short to Battery
B2487	RF SIDE REPEATER LAMP OUTPUT Ckt Short to Battery
B2489	UNDERHOOD LAMP OUTPUT CIRCUIT Failure
B2490	UNDERHOOD LAMP OUTPUT CIRCUIT Short to Battery
B2491	RF PARK LAMP OUTPUT CIRCUIT Short to Battery
B2492	Already Programmed (Test Mode DTC Only !!!)
B2493	LF PARK LAMP OUTPUT CIRCUIT Short to Battery
B2494	ANTI THEFT HORN OUTPUT CIRCUIT Short to Batt
B2495	ANTI THEFT HORN OUTPUT CIRCUIT Failure
B2496	ANTI THEFT HORN OUTPUT CIRCUIT Short to Gnd
B2499	COURTESY LAMP OUTPUT Failure
B2500	COURTESY LAMP OUTPUT Ckt Short to Battery
B2501	LF LAMP LOW BEAM CIRCUIT Failure
B2502	LF LAMP LOW BEAM CIRCUIT Short to Battery
B2503	RF LAMP LOW BEAM CIRCUIT Failure
B2504	RF LAMP LOW BEAM CIRCUIT Short to Battery
B2505	LF LAMP HIGH BEAM CIRCUIT Failure
B2506	LF LAMP HIGH BEAM CIRCUIT Short to Battery
B2507	RF LAMP HIGH BEAM CIRCUIT Failure
B2508	RF LAMP HIGH BEAM CIRCUIT Short to Battery
B2509	Rear Fog Lamp Switch Circuit Failure
B2510	Main Blower Motor Relay Circuit Short to Battery
B2511	Horn Output Relay Circuit Short to Battery
B2512	Front Fog Lamp Relay Ckt Short to Battery
B2513	Blower (Fan) Circuit Failure
B2514	Blower (Fan) Circuit Short to Vbatt
B2515	Heater Blower Relay Circuit Failure
B2516	Blower Control Circuit Failure
B2517	Emergency Power Off System Faulted
B2518	Compressor Overtemp Fault
B2519	High Mount Stop Lamp Circuit Failure
B2520	High Mount Stop Lamp Circuit Short to Battery
B2523	License Lamp Circuit Failure
B2524	License Lamp Circuit Short to Battery
B2525	Left Rear Backup Lamp Circuit Failure
B2526	Left Rear Backup Lamp Circuit Short to Battery
B2527	Left Rear Stop lamp Circuit Failure

B2528	Left Rear Stop lamp Circuit Short to Battery
B2529	Left Rear Turn Lamp Circuit Failure
B2530	Left Rear Turn Lamp Circuit Short to Battery
B2531	Right Rear Backup Lamp Circuit Failure
B2532	Right Rear Backup Lamp Circuit Short to Battery
B2533	Right Rear Stop lamp Circuit Failure
B2534	Right Rear Stop lamp Circuit Short to Battery
B2535	Right Rear Turn Lamp Circuit Failure
B2536	Right Rear Turn Lamp Circuit Short to Battery
B2539	Aux A/C Mode Position Reference Circuit Short to Ground
B2540	Aux A/C Mode Position Reference Circuit Short to Battery
B2543	Aux A/C Control Switch Reference Circuit Short to Ground
B2544	Aux A/C Control Switch Reference Circuit Short to Battery
B2545	System Power Relay Circuit Short to Battery
B2546	System Power Relay Circuit Failure
B2550	LAMP DOME OUTPUT Circuit Short to Ground
B2553	Disable Signal Output Circuit Short to Battery
B2554	LAMP DOME OUTPUT Circuit Failure
B2555	LAMP DOME OUTPUT Circuit Short to Battery
B2556	Enable Signal Circuit Short to Battery
B2557	Left Power Sliding Door Open/Close Output Circuit Short to Battery
B2558	Right Power Sliding Door Open/Close Output Circuit Short to Battery
B2559	Aux A/C Blower Motor Relay Circuit Short to Battery
B2560	Aux A/C Blower Motor Relay Circuit Short to Ground
B2561	Aux A/C Blower Speed 1 Circuit Failure
B2562	Aux A/C Blower Speed 1 Circuit Short to Ground
B2563	Aux A/C Blower Speed 2 Circuit Failure
B2564	Aux A/C Blower Speed 2 Circuit Short to Ground
B2565	Right Tail Lamp Circuit Failure
B2566	Right Tail Lamp Circuit Short to Ground
B2567	Reverse Mirror Output Circuit Failure
B2568	Reverse Mirror Output Circuit Short to Ground
B2569	Liftgate Disarm Switch Circuit Short to Ground
B2570	Right Lamp Outage Signal Circuit Short to Ground
B2571	Left Lamp Outage Signal Circuit Short to Ground
B2580	Aux Blower Sense Switch Circuit Failure
B2581	Passenger Seat Occupant Detection Circuit Short To Ground
B2582	Passenger Seat Occupant Detection Circuit Open
B2583	Child Seat Detection Circuit Short to Ground
B2584	Child Seat Detection Circuit Open

B2585	Anti Theft Input Signal Circuit Short To Battery
B2586	Headlamp Mode Select Circuit Failure
B2587	Passenger Seat Occupant Detection Circuit Short To Battery
B2588	Child Seat Detection Circuit Short To Battery
B2589	Unexpected Door Reversal During Close
B2590	Vehicle Park/Speed Signal Circuit Failure
B2591	Detent Signal Missing During Unlatch
B2592	PSD Not Fully Closed (Module Commanded Successfully)
B2593	Power Sliding Door Opened During Module Close Command
B2594	No Movement Detected After an Unlatch During Power Open
B2595	Anti Theft Input Signal Circuit Failure
B2596	Headlamp Aim Output Relay Circuit Short To Battery
B2597	Headlamp Aim Output Relay Circuit Failure
B2598	Headlamp Relay Circuit Failure
B2599	Tailgate Release Open Circuit
B2600	Double Locking Door Motor Frozen
B2601	No Latch Signal Sensed on Closing and Door Reversed
B2602	Missing Latch Signal During Power Sliding Door Unlatch
B2603	PSD Not Fully Closed During Self-Test
B2604	Power Sliding Door On/Off Switch Open Circuit
B2605	Disable Signal Open Circuit
B2606	A/C Temperature Sensor Out of Range
B2796	No Communication In Immobilizer System
B2799	Toyota: Engine Immobiliser System Malfunction GM: Suspension control select switch circuit open
B2AAA	Scanner Communication Incompatibility
B2TAE	Nonsense Code
B3000 – B3999 (ISO/SAE reserved)	
B3000	ISO/SAE Reserved
B3004	Right Rear Door Ajar - Circuit High